


Rear Seat Back Cushion Panel Replacement

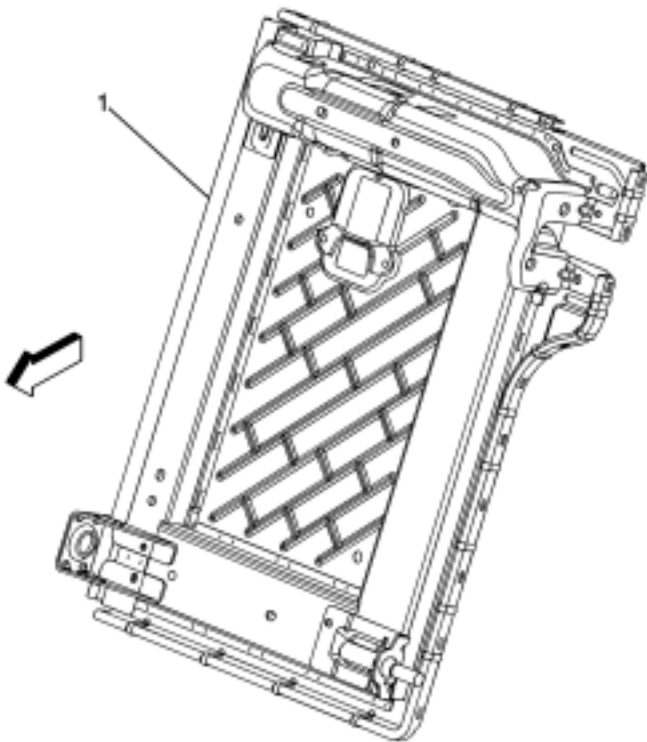

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Remove the rear seat back cushion. Refer to <a href="#">Rear Seat Back Cushion Replacement</a></p> <p>2. Remove the rear seat head restraint guide. Refer to <a href="#">Rear Seat Head Restraint Guide Replacement</a></p> <p>3. Remove the rear seat back cushion latch release knob bezel. Refer to <a href="#">Rear Seat Back Cushion Latch Release Knob Bezel Replacement</a></p> <p>4. Remove the child seat back cushion cover. Refer to <a href="#">Child Seat Back Cushion Cover Replacement</a></p> <p>5. Remove the rear seat back cushion pivot support. Refer to <a href="#">Rear Seat Back Cushion Pivot Support Replacement</a></p> <p>6. Remove the rear seat latch. Refer to <a href="#">Rear Seat Latch Replacement</a></p>	
1	<p>Rear Seat Back Cushion Panel</p> <p><b>Procedure</b></p> <p>1. Remove the seat back carpet.</p> <p>2. If replacing the seat back panel, transfer components as necessary.</p>