


Steering Linkage Outer Tie Rod Replacement

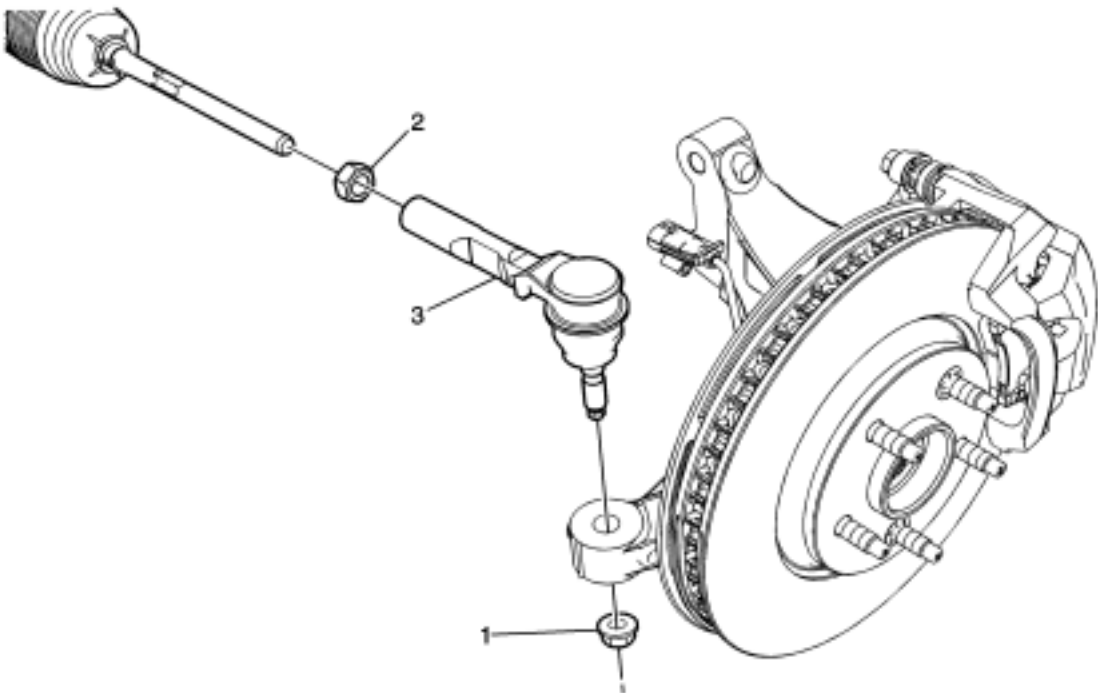

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <p>1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .</p> <p>2. Remove the front tire and wheel assembly. Refer to Tire and Wheel Removal and Installation .</p> | |
| 1 | <p>Steering Linkage Outer Tie Rod Nut</p> <p>Warning: This component is equipped with torque-to-yield fasteners. Install a NEW torque-to-yield fastener when installing this component. Failure to replace the torque-to-yield fastener could cause bodily injury and damage to the vehicle or component.</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <p>1. Remove the steering linkage outer tie rod nut. DISCARD the nut.</p> <p>2. Install a NEW outer tie rod nut.</p> <p>3. Use the <i>EN-45059</i> meter in order to tighten the outer tie rod nut to the specification.</p> <p>Tighten</p> <p>1. 30N·m (22lbft)</p> <p>2. 128degrees</p> <p>Special Tools</p> <p><i>EN-45059</i> Angle Meter</p> <p>For equivalent regional tools, refer to Special Tools .</p> |
| 2 | <p>Steering Linkage Inner Tie Rod Nut</p> |