


Rear Spring, Insulator, and Jounce Bumper Replacement

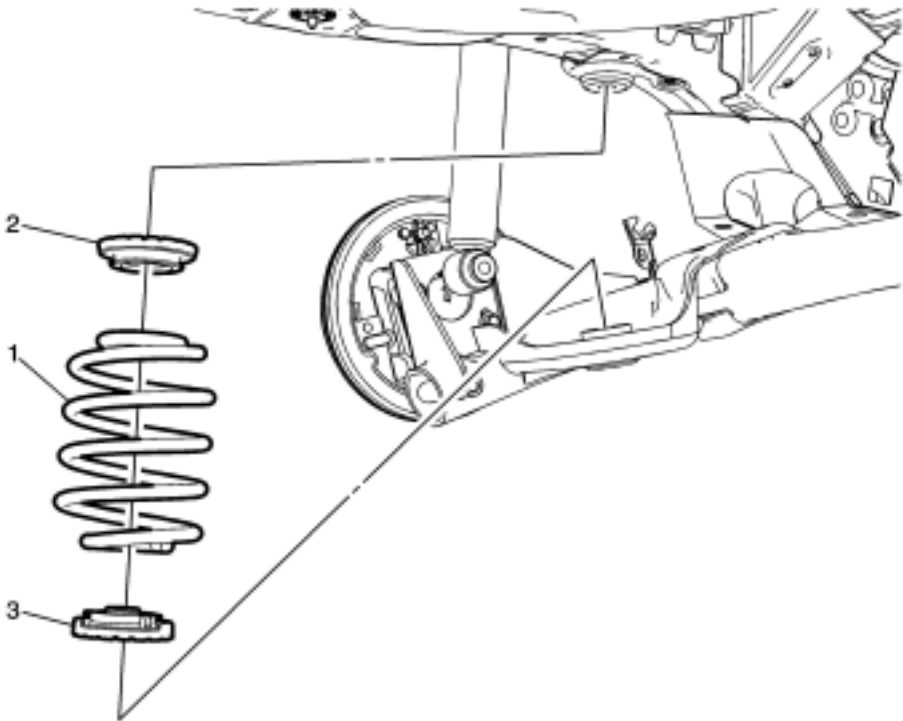

Callout	Component Name
<p>Preliminary Procedure</p> <p>Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle .</p>	
1	<p>Rear Spring</p> <p>Procedure</p> <p>1. If removing the rear spring to service other suspension components, note the position of the rear spring in relationship to the insulators.</p> <p>2. Support the rear axle with a hydraulic jack.</p> <p>3. Remove the lower rear shock absorber bolt. Refer to Shock Absorber Replacement .</p>
2	<p>Upper Rear Spring Insulator</p> <p>Tip Ensure that the rear spring insulator is properly seated in the rear frame rail.</p>
3	<p>Lower Rear Spring Insulator</p> <p>Tip Ensure that the rear spring insulator is properly seated in the rear axle.</p>