


Rear Compartment Lid Latch Replacement

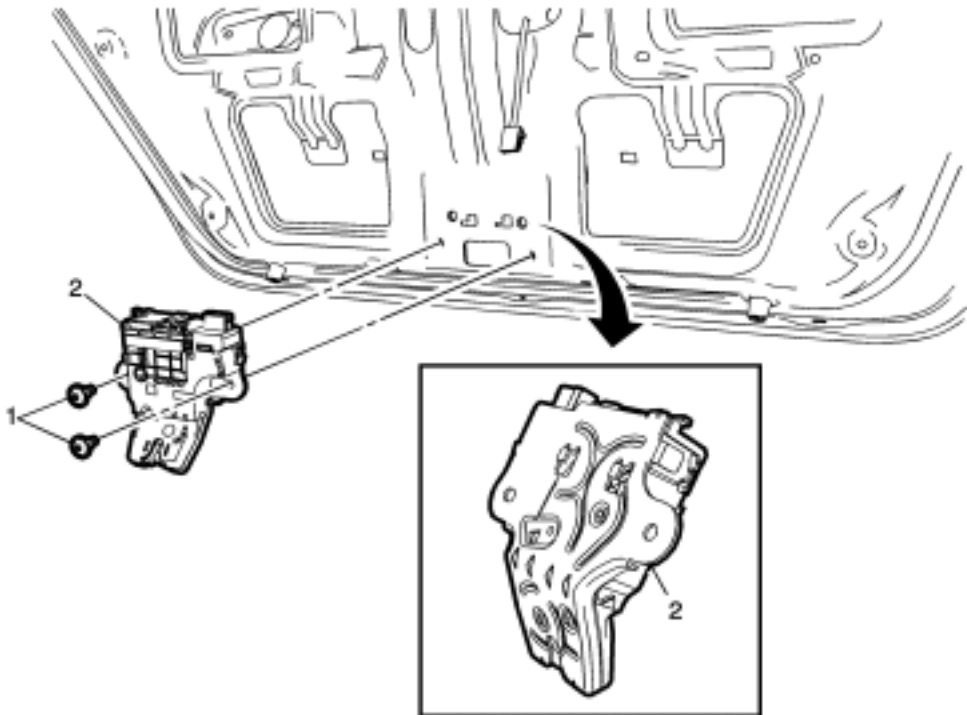

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the rear compartment lid inner panel trim. Refer to Rear Compartment Lid Inner Panel Trim Replacement .</p>	
1	<p>Rear Compartment Lid Latch Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 9N·m (80lbin)</p>
2	<p>Rear Compartment Latch</p> <p>Procedure</p> <p>1. Disconnect the electrical connection. 2. Slide the latch to the right and up to remove from the compartment lid.</p>