

## Front Wheel Bearing and Hub Replacement


### Special Tools

CH-50559 Wheel Hub/Bearing Remover Kit


For equivalent regional tools, refer to [Special Tools](#) .

### Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the steering knuckle assembly from the vehicle. Refer to [Steering Knuckle Replacement](#) .

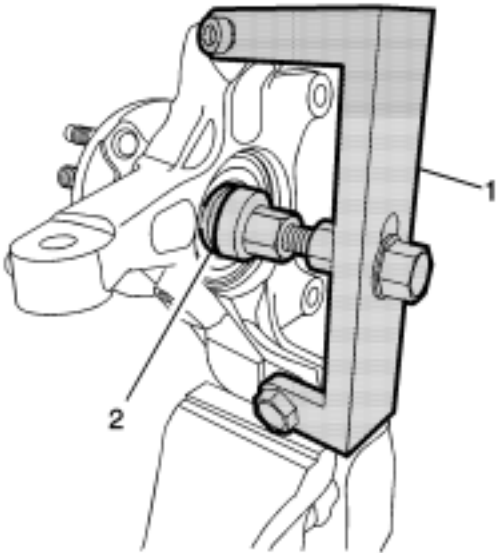

3. Position the steering knuckle assembly (1) in a suitable vise.
4. Position the CH-50059-1 wheel hub/bearing removal/installation bridge assembly (1) and the CH-50059-2 wheel hub/bearing removal/installation adapter (2) on the wheel bearing inner hub.
5. Using the CH-50059-1 and the CH-50059-2 , remove the wheel hub from the wheel bearing.

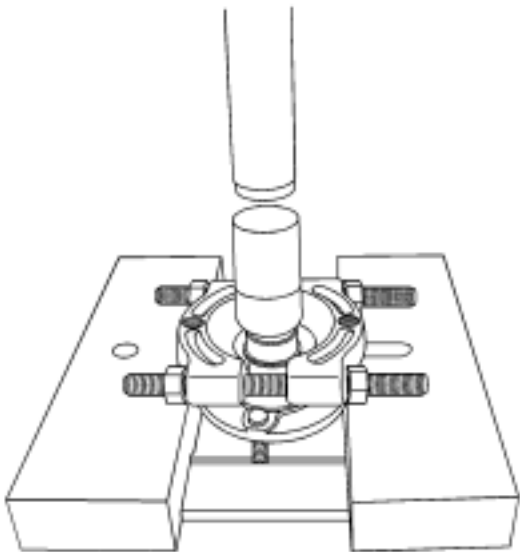

6. If the inner race of the bearing is pulled out with the hub, remove the inner race from the using the appropriate tools.