


Center Pillar Upper Trim Panel Replacement (With AHU)

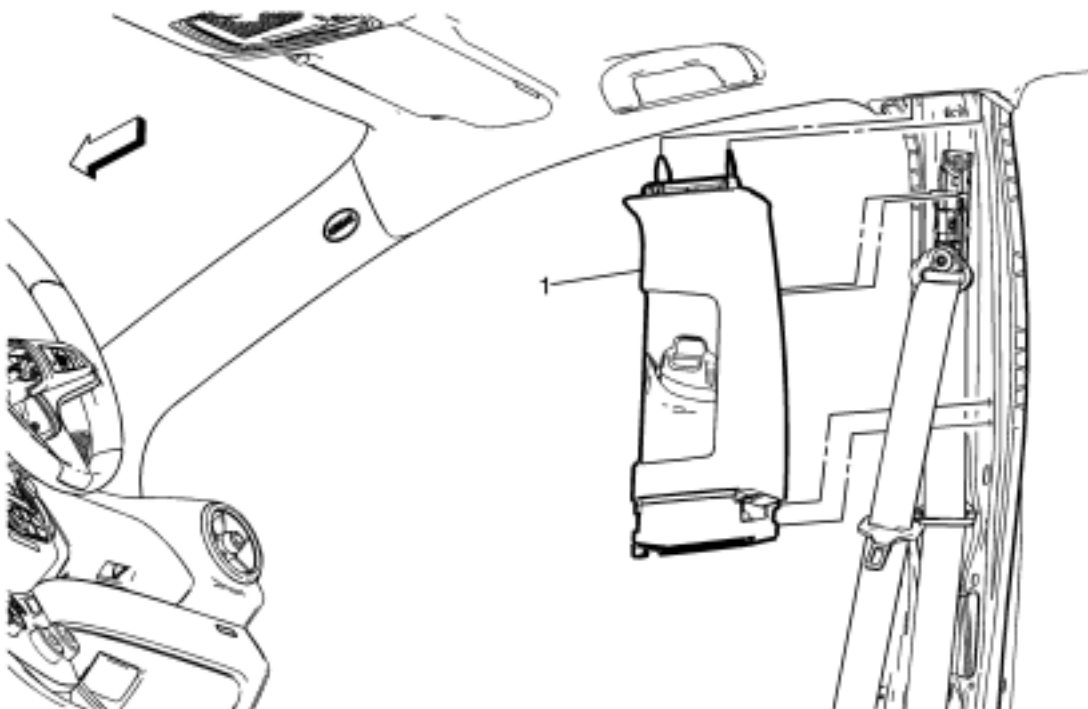

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the center pillar lower trim panel. Refer to Center Pillar Lower Trim Panel Replacement .</p> <p>2. Remove the seat belt from the front seat. Refer to Driver or Passenger Seat Shoulder Belt Replacement .</p>	
1	<p>Center Pillar Upper Trim Panel Assembly</p> <p>Procedure</p> <p>When replacing the center pillar upper trim panel, feed the seat belt through the panel.</p>