


Air Conditioning Evaporator Hose Assembly Replacement

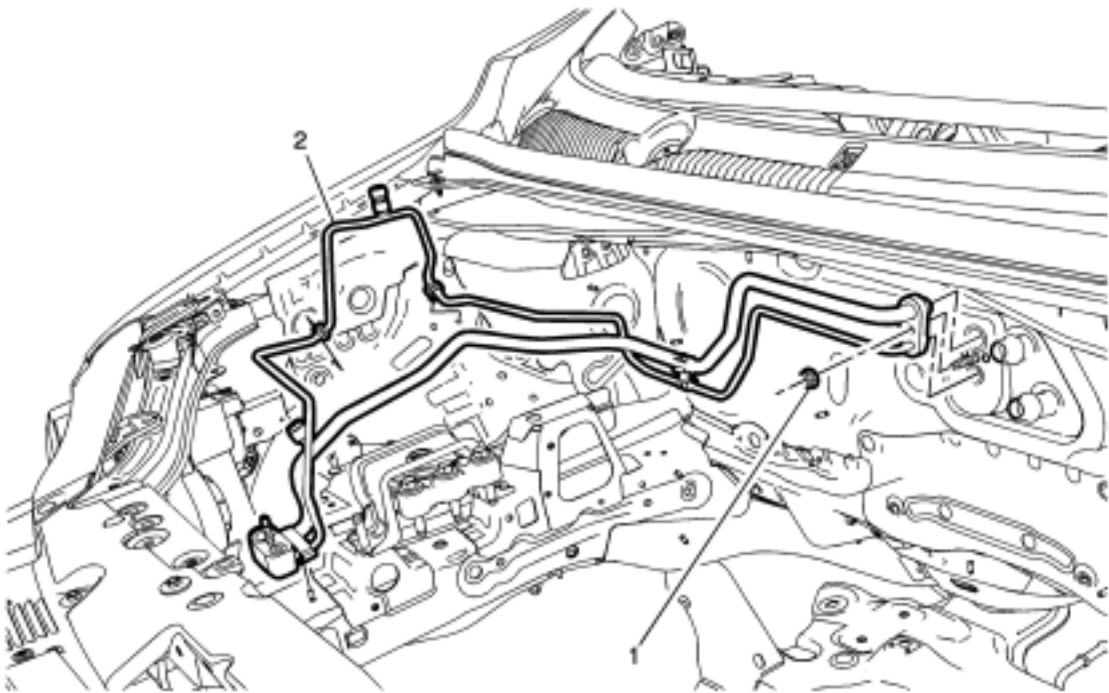

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Recover the refrigerant. Refer to Refrigerant Recovery and Recharging</p> <p>2. Remove the air conditioning compressor and condenser hose. Refer to Air Conditioning Compressor and Condenser Hose Replacement</p> <p>3. Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement or Air Cleaner Assembly Replacement .</p>	
1	<p>Air Conditioning Evaporator Hose Assembly Nut.</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 22 N·m (16 lbft)</p>
2	<p>Air Conditioning Evaporator Hose Assembly</p> <p>Procedure</p> <p>Discard and replace all sealing washers. Refer to Air Conditioning System Seal Replacement .</p>