


Rear Seat Latch Replacement

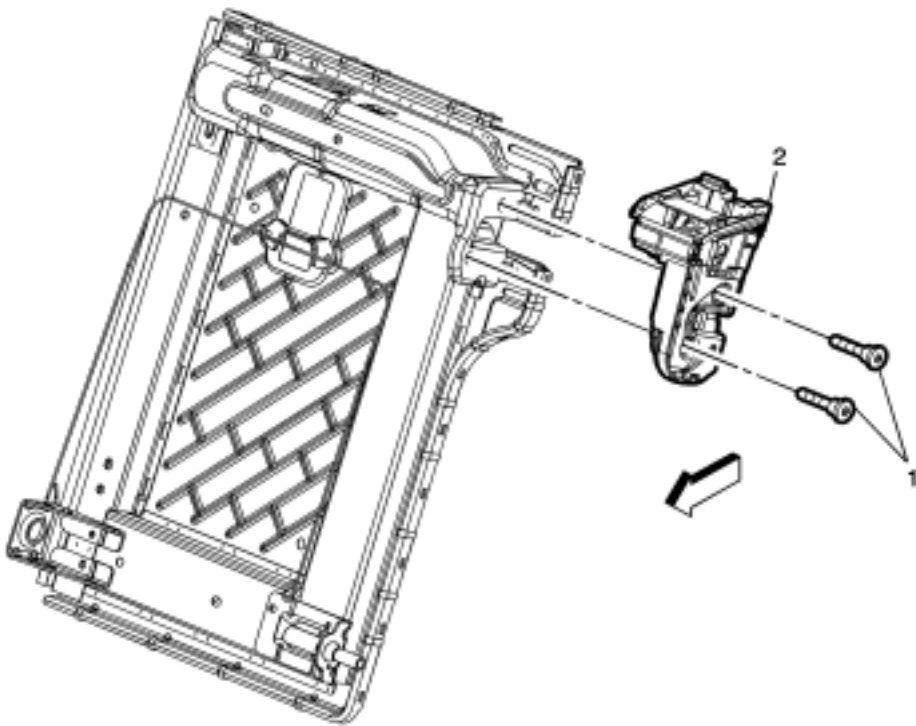

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Remove the rear seat back cushion. Refer to <a href="#">Rear Seat Back Cushion Replacement</a> .</p> <p>2. Remove the rear seat back cushion cover and pad. Refer to <a href="#">Rear Seat Back Cushion Cover and Pad Replacement</a> .</p>	
1	<p>Rear Seat Latch Fasteners (Qty: 2)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Tighten</b> 45 N·m (33 lbft)</p>
2	<p>Rear Seat Latch</p>