


5. Install, but do not tighten, the 2steering column lower support bracket bolts (1, 2).

Caution: Refer to [Fastener Caution](#) .

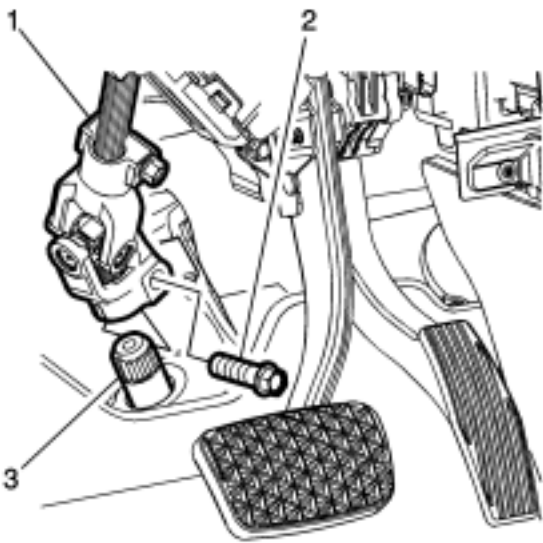

- 6. Install the intermediate steering shaft lower bolt (2) and tighten to **49 N·m (36 lbft)**.
- 7. Tighten the 2steering column lower support bracket bolts to **22 N·m (16 lbft)**.
- 8. Tighten the 2steering column upper support bracket nuts to **22 N·m (16 lbft)**.
- 9. Connect any electrical connectors as necessary.
- 10. Install the left side floor air outlet duct. Refer to [Floor Air Outlet Duct Replacement - Left Side](#) .
- 11. Install the instrument panel lower trim pad cover. Refer to [Instrument Panel Lower Trim Pad Cover Replacement](#) .
- 12. Install the upper trim cover and the lower trim cover to the steering column. Refer to [Steering Column Lower Trim Cover Replacement](#) .
- 13. Setup the power steering control module. Refer to [Power Steering Control Module Programming and Setup](#) .
- 14. Center the steering angle sensor. Refer to [Steering Angle Sensor Centering](#) .