



- 6. Install the upper frame suspension retaining bolts(1) and tighten to **135N·m (100lb ft)**
- 7. Remove the support for the power steering gear.

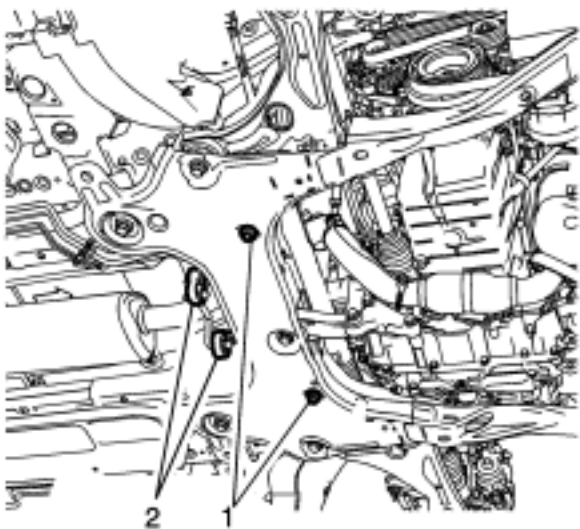

- 8. Install the steering gear retaining fasteners(1). Refer to [Steering Gear Boot Replacement](#) .
- 9. Connect the hydraulic power steering hoses to the front frame, if equipped.
- 10. Connect the exhaust isolators(2) to the front suspension frame.

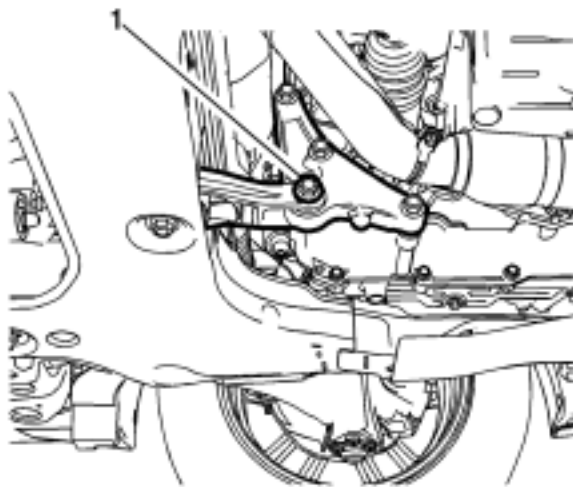

- 11. Install the rear transmission mount bracket to rear mount through bolt(1). Refer to [Transmission Rear Mount Replacement](#) .
- 12. Connect the power brake booster pump hose and connector, if equipped.
- 13. Connect the lower ball joints to the steering knuckles. Refer to [Lower Control Arm Replacement](#) .
- 14. Connect the stabilizer links to the strut assemblies. Refer to [Stabilizer Shaft Link Replacement](#) .
- 15. Connect the steering linkage tie rod end to the steering knuckle. Refer to [Steering Linkage Outer Tie Rod Replacement](#) .
- 16. Install the front bumper impact bar lower bracket. Refer to [Front Bumper Impact Bar Lower Bracket Replacement](#) .
- 17. Install the left and right front wheel house liner inner front extensions. Refer to [Front Wheelhouse Liner Inner Front Extension Replacement](#) .
- 18. Install the skid plate to the front frame, if equipped. Refer to [Drivetrain and Front Suspension Frame Skid Plate Replacement](#) .
- 19. Install the front tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .
- 20. Lower the vehicle.
- 21. Remove the support of the radiator and condenser.