


SONIC

Battery Negative Cable Disconnection and Connection (LCU,LDE)

Removal Procedure


- 1. Turn on the radio and record all of the customer radio station presets.
- 2. Ensure that all lamps and accessories are turned off.
- 3. Turn the ignition OFF and remove the ignition key.

Warning: Refer to [Battery Disconnect Warning](#) .

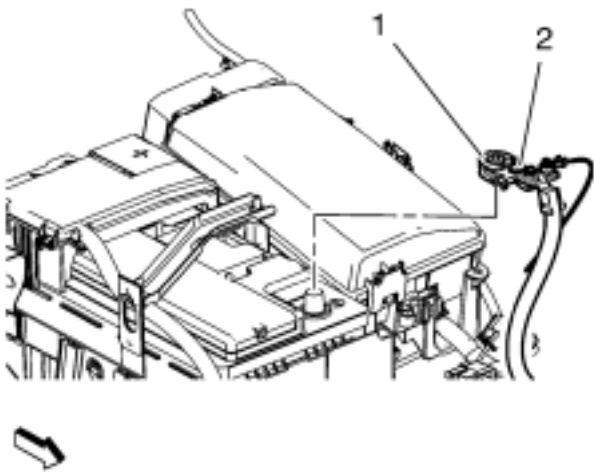

- 4. Loosen the battery negative cable nut (2).
- 5. Remove the battery negative cable (1) from the battery.

Installation Procedure

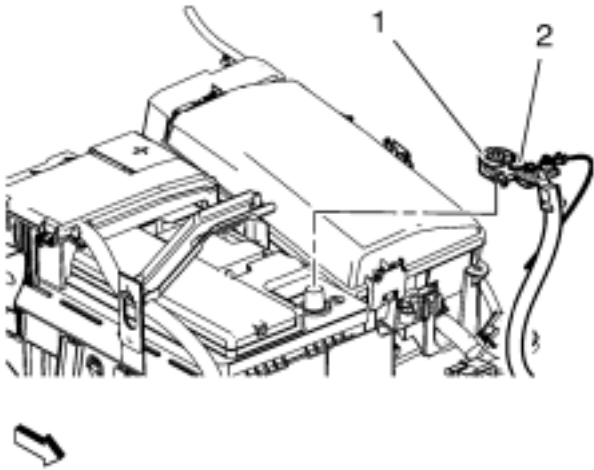

- 1. Install the battery negative cable (1) to the battery.

Caution: Refer to [Fastener Caution](#) .

- 2. Fasten the battery negative cable nut (2) and tighten the nut to **4.5N·m (40lbin)**.
- 3. Insert the ignition key and turn the ignition to the ON position.
- 4. Program volatile memory. Refer to [Control Module References](#) .