


Liftgate Replacement

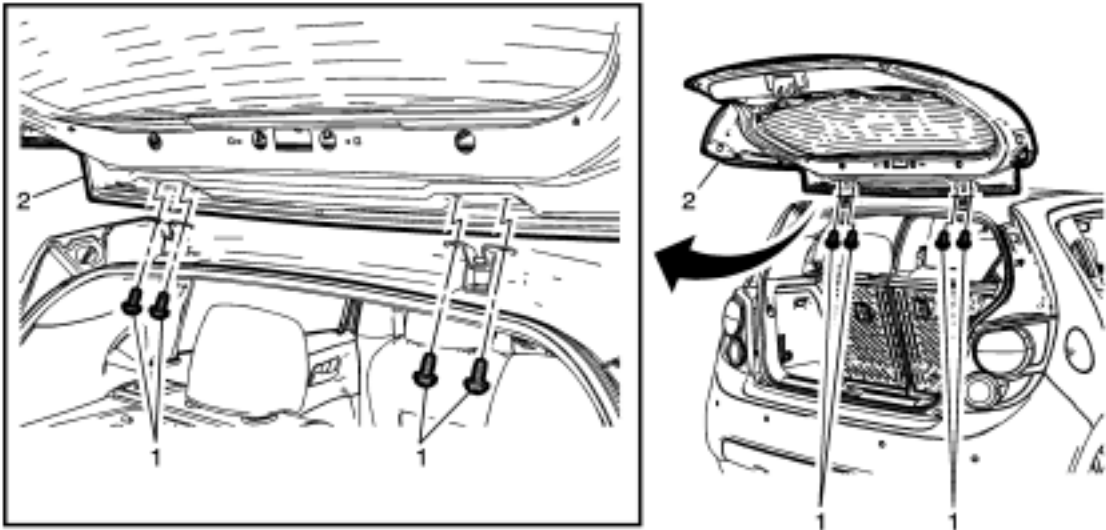

| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <p>1. Disconnect the electrical connectors.</p> <p>2. Disconnect the liftgate struts. Refer to Liftgate Strut Replacement .</p> <p>3. Remove the body lock pillar upper trim. Refer to Body Lock Pillar Upper Trim Panel Replacement .</p> | |
| 1 | <p>Liftgate Hinge Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 22 N·m (16 lbft)</p> |
| 2 | <p>Liftgate</p> <p>Procedure</p> <p>1. Transfer parts as needed.</p> <p>2. Adjust the liftgate if needed. Refer to Liftgate Adjustment .</p> |