


- 2. Position the CH-50559–4 (1) wheel hub/bearing installation adapter and the appropriate extension to the inside of the bearing and position the CH-50559–2 wheel hub removal/installation adapter and the appropriate extension on the wheel hub.
- 3. Press in the hub until it is correctly seated.

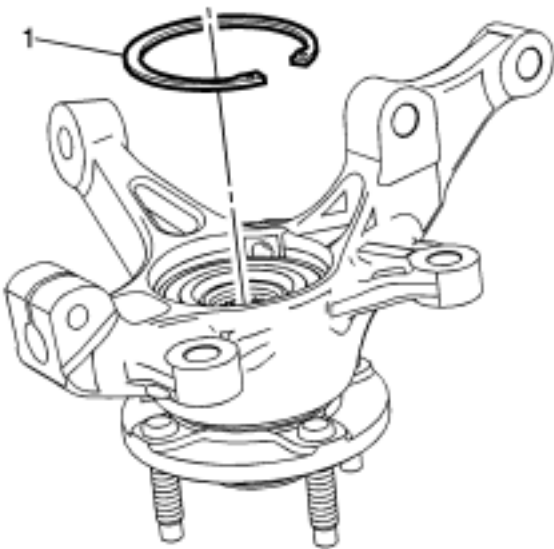

- 4. Using the appropriate tool, install the retaining ring (1).
- 7. Lower the vehicle.
- 5. Verify the hub rotates smoothly.
- 6. Install the steering knuckle assembly in the vehicle. Refer to [Steering Knuckle Replacement](#) .