


Rear Side Door Window Outer Sealing Strip Replacement (Hatchback)

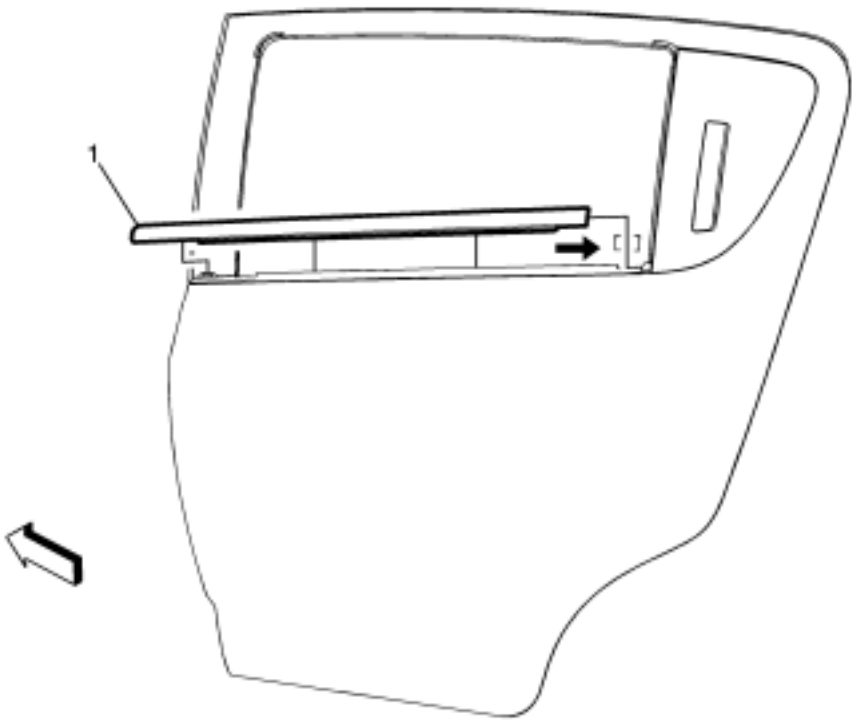

Callout	Component Name
1	<div>Rear Side Door Window Outer Sealing Strip</div> <div>Procedure<div><div>1. Use the appropriate tool, lift the front corner of the sealing strip and pull upward and away from the door flange.</div><div>2. Press firmly to insert the rear side door window sealing strip back on the door flange.</div><div>3. Inspect the door window for proper operation before installing the door trim panel.</div></div></div>