


Rear Seat Shoulder Belt Guide Opening Bezel Replacement

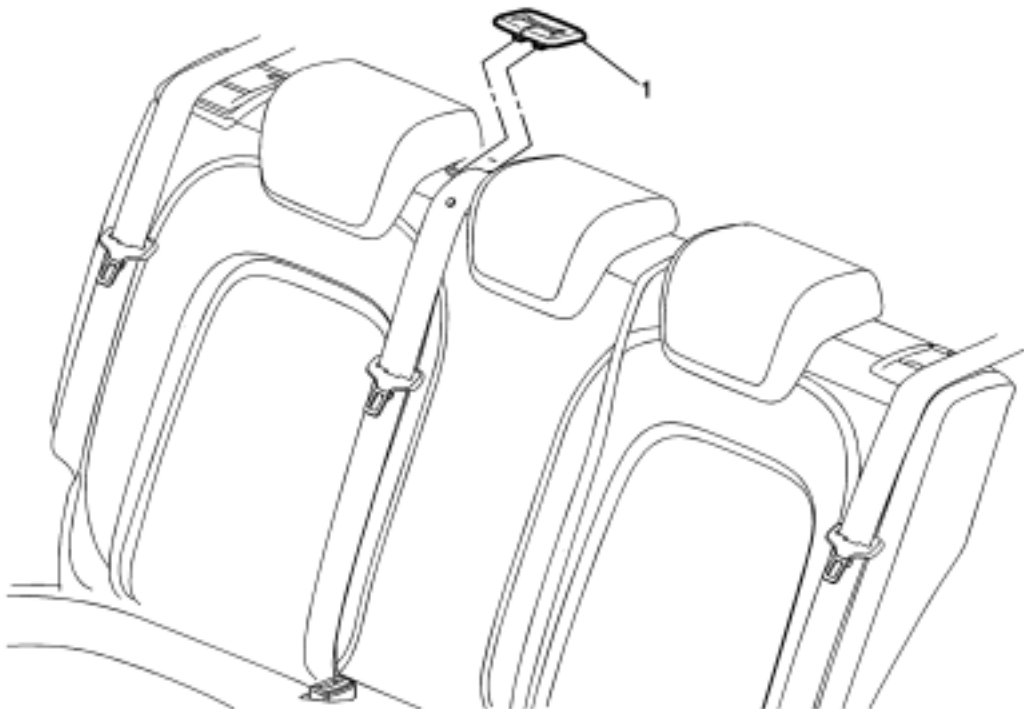

Callout	Component Name
1	<div>Rear Seat Shoulder Belt Opening Bezel</div> <div><b>Procedure</b></div> <div>Push inward and upward from the front of the bezel to release from the seat back.</div> <div><b>Note:</b> The rear seat shoulder belt opening bezel is part of the rear seat center belt assembly and is replaced as an assembly.</div>