


Steering Wheel Replacement

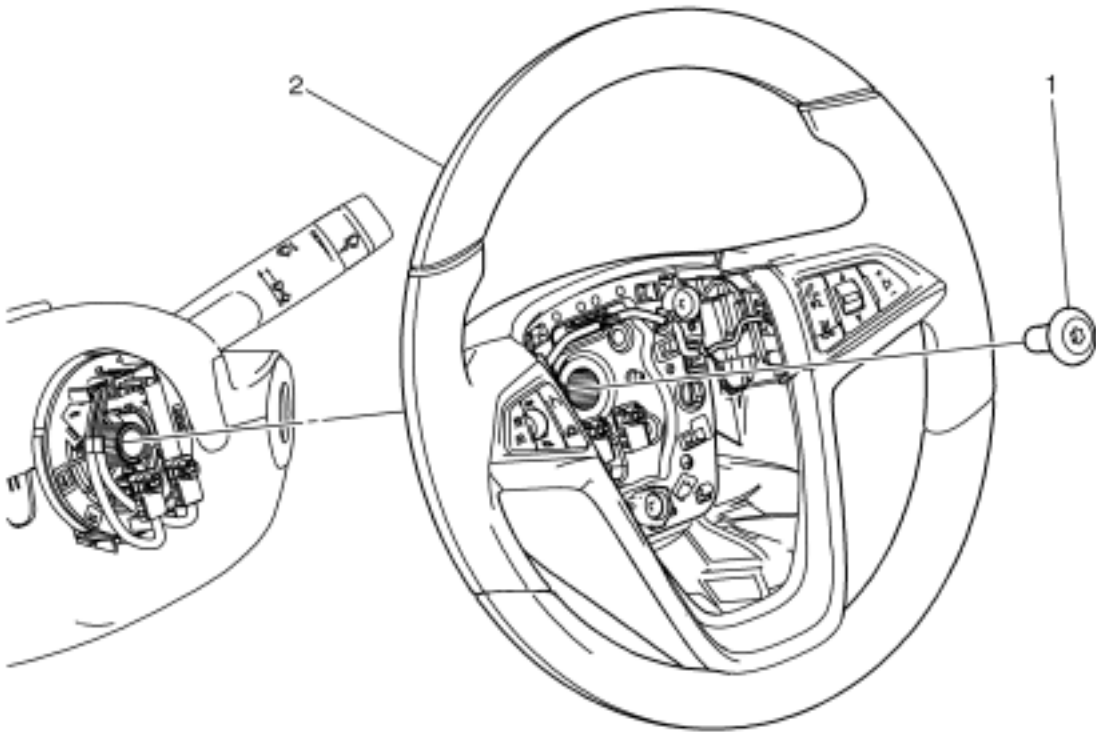

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. If equipped with the supplemental inflatable restraint system, remove the steering wheel module. Refer to Steering Wheel Inflatable Restraint Module Replacement . If equipped with a steering wheel horn cap, remove the horn cap. Refer to Steering Wheel Horn Cap Replacement .</p> <p>2. Use paint in order to place match marks on the steering wheel and on the steering column shaft.</p>	
1	<p>Steering Wheel Bolt</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 30N·m (22lbft)</p>
2	<p>Steering Wheel</p> <p>Procedure</p> <p>1. Disconnect all electrical connectors as necessary. 2. Loosen the steering wheel bolt until 2 to 3 threads are left engaged. 3. Wiggle the steering wheel until the steering wheel disengages completely. 4. Remove the steering wheel bolt. 5. Remove the steering wheel. 6. Copy the match marks from the old steering wheel to the new steering wheel. 7. Transfer any parts as necessary.</p>