


Rear Side Door Outside Handle Bracket Replacement

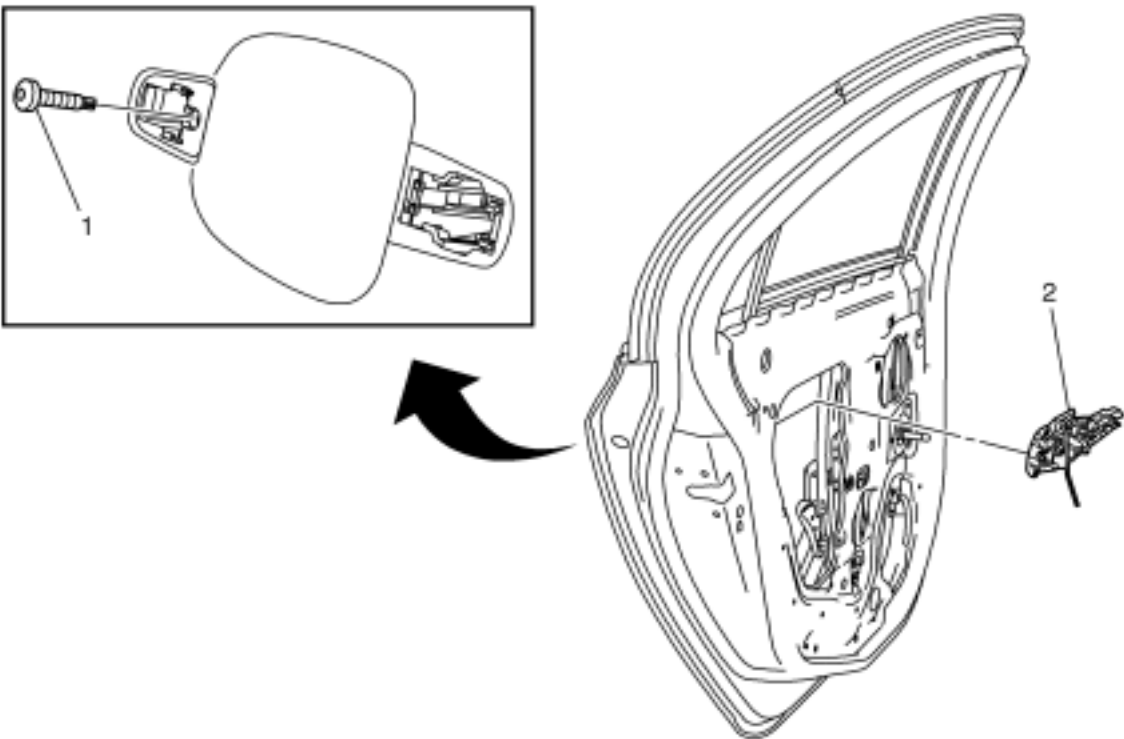

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Remove the rear side door trim panel. Refer to <a href="#">Rear Side Door Trim Replacement</a> .</p> <p>2. Remove the rear side door outside handle. Refer to <a href="#">Rear Side Door Outside Handle Replacement</a> .</p>	
1	<p>Rear Side Door Outside Handle Bracket Screw</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <p>Remove the rear side door water deflector.</p> <p><b>Tighten</b> 5 N·m (44 lbin)</p>
2	<p>Rear Side Door Outside Handle Bracket</p> <p><b>Procedure</b></p> <p>1. Release rear side door outside handle rod mechanism at shift linkage lever – clip.</p> <p>2. Release the rear side door latch cylinder rod from the door latch.</p> <p>3. Transfer components as necessary.</p> <p>4. Inspect the door latch system for proper operation before installing the door trim panel.</p>