


## Stabilizer Shaft Replacement

### Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the stabilizer shaft links from the stabilizer shaft. Refer to [Stabilizer Shaft Link Replacement](#) .
4. Remove the lower control arm ball joint bolt and nut from the steering knuckle. Refer to [Lower Control Arm Replacement](#) .

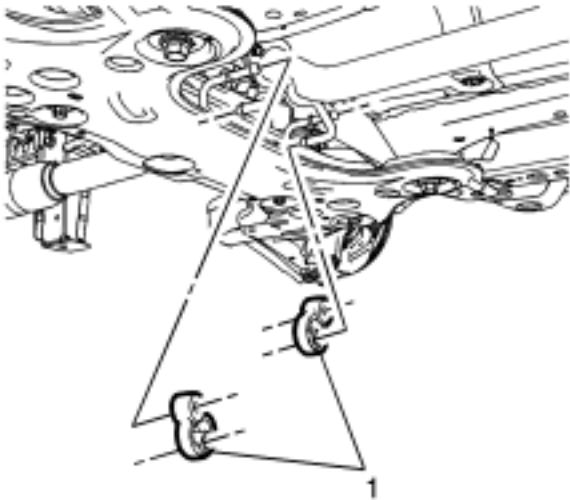

5. Remove the exhaust pipe insulators (1).



6. Using a suitable support, lower the front suspension frame (1) enough to gain access to the stabilizer shaft insulator bolts. Refer to [Drivetrain and Front Suspension Frame Replacement](#) .