


Driver or Passenger Seat Head Restraint Guide Replacement

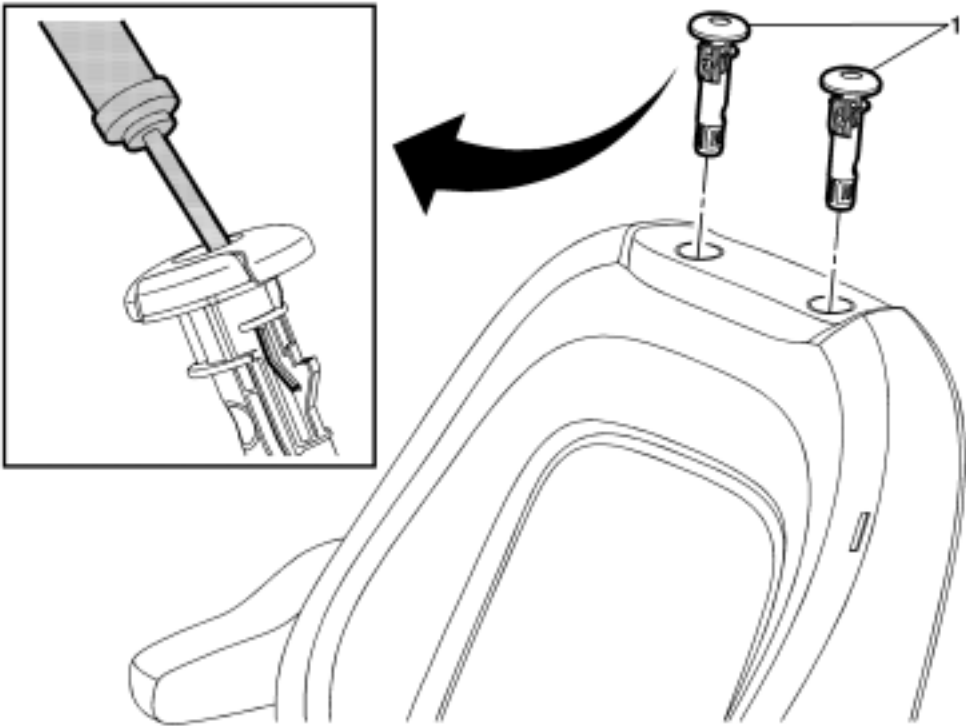

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the seat head restraint. Refer to Driver or Passenger Seat Head Restraint Replacement .</p>	
1	<p>Driver or Passenger Seat Head Restraint Guide (Qty: 2)</p> <p>Procedure</p> <p>Using a suitable flat-bladed tool, slide the tool on the inside of the guide until it finds the slot. Then push the tool forward pulling the guide tab inward, while pulling upward to remove the guide from the seat back frame.</p>