



- Leave a base of auto-adhesive on the pinchweld flange.
- The only suitable lubrication is clean water.
- Use *BO-24402-A* Glass Sealant Remover (Cold Knife) .
- *BO-39032* Stationary Glass Removal Tool , or equivalent in order to remove the window.

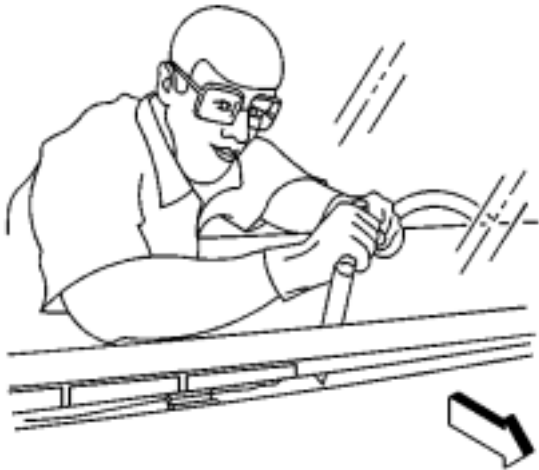

9. Use the appropriate tool to remove the bottom of the window from the auto-adhesive. Keep the cutting edge of the tool against the window. Do this from inside the vehicle.

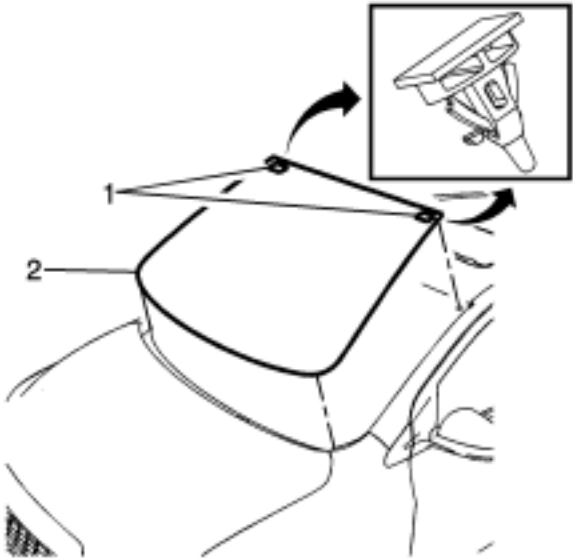

10. With an assistant, remove the window (2) from the vehicle. Check that the retainers (1) are still attached to the window before installing.

Installation Procedure

1. Install the windshield into the opening. Refer to [Adhesive Installation of Windshields](#) .
2. Install the rearview mirror. Refer to [Inside Rearview Mirror Replacement](#) .
3. Install the interior windshield garnish moldings. Refer to [Windshield Side Garnish Molding Replacement](#) .
4. Install the air inlet grille. Refer to [Air Inlet Grille Panel Replacement](#) .
5. Install the windshield wipers arms. Refer to [Windshield Wiper Arm Replacement](#) .
6. Remove the double layer of masking tape around the perimeter of the painted surfaces and the interior trim.
7. Close the hood.