


Driver or Passenger Seat Head Restraint Replacement

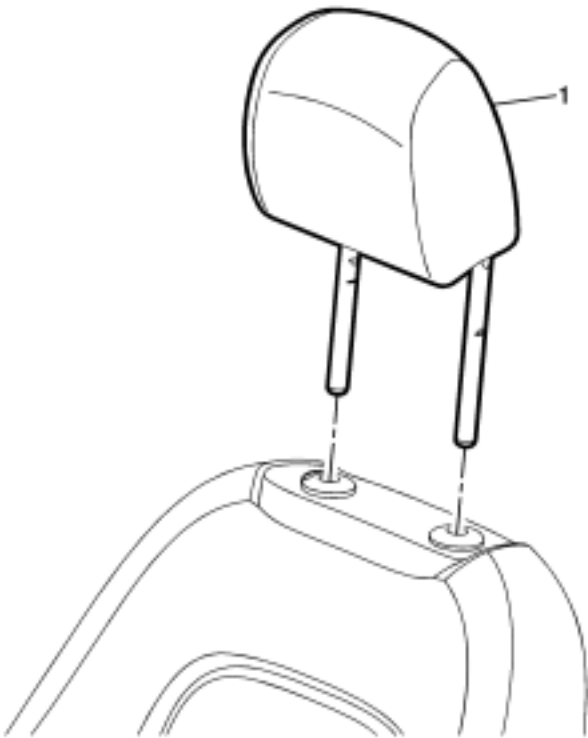

| Callout | Component Name |
|---------|--|
| 1 | <div>Driver or Passenger Seat Head Restraint</div> <div>Procedure<div><div>1. Raise the headrest to the full upward position.</div><div>2. Depress the flush button on the head restraint guide.</div><div>3. Remove the head restraint by pulling up on the restraint.</div></div></div> |