


Outside Rearview Mirror Motor Replacement

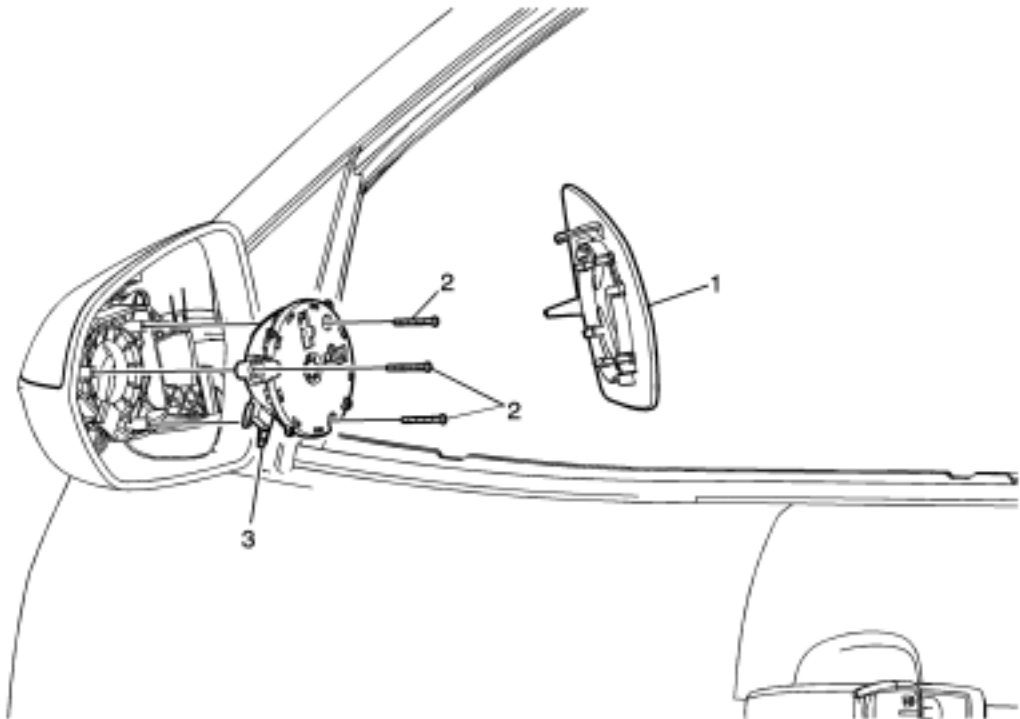

Callout	Component Name
1	<div>Outside Rearview Mirror Glass</div> <div><b>Procedure</b></div> <div>Remove the outside rearview mirror glass. Refer to <a href="#">Outside Rearview Mirror Glass Replacement</a> .</div>
2	<div>Outside Rearview Mirror Motor Fastener (Qty: 3)</div> <div><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</div> <div><b>Procedure</b></div> <div>Disconnect the outside mirror motor electrical connector.</div> <div><b>Tighten</b> 5 N·m (44 lbin)</div>
3	<div>Outside Rearview Mirror Motor</div> <div><b>Procedure</b></div> <div>Inspect the outside mirror for proper operation before installing the door trim panel.</div>