


Rear Side Door Stationary Window Replacement

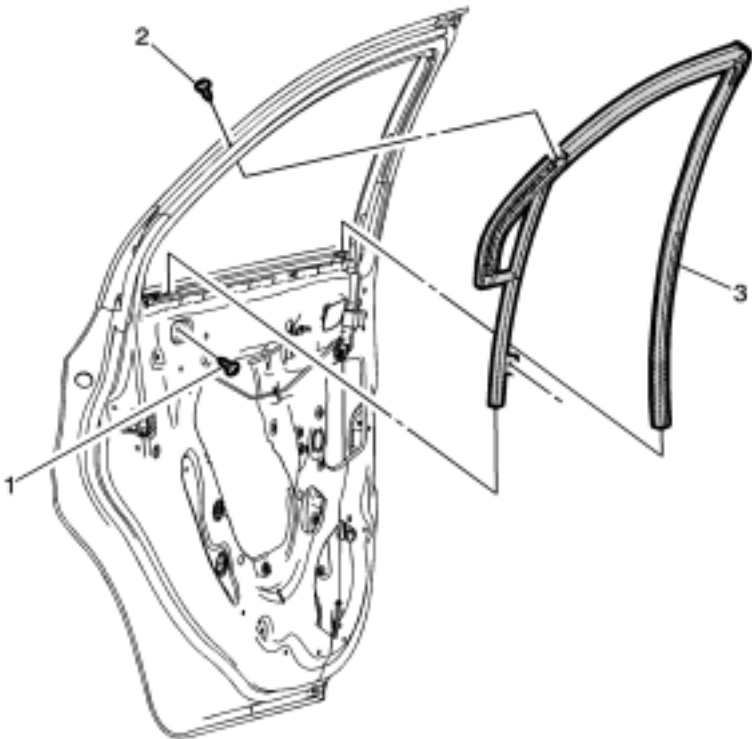

Callout	Component Name
<p>Warning: Refer to Glass and Sheet Metal Handling Warning .</p> <p>Preliminary Procedures</p> <p>Remove the rear side door window. Refer to Rear Side Door Window Replacement .</p>	
1	<p>Rear Side Door Window Weatherstrip Lower Bolt</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 9 N·m (80 lbin)</p> <p>Tip The weatherstrip and window is serviced as one assembly.</p>
2	<p>Rear Side Door Window Weatherstrip Upper Screw</p> <p>Procedures</p> <p>1. Pull the weatherstrip out of the upper retainer to expose the screw. 2. Remove the weatherstrip from the front and rear lower guides. 3. Grasp both upper corners, pull forward releasing assembly from the door frame.</p> <p>Tighten 3 N·m (27 lbin)</p>
3	<p>Rear Side Door Window Weatherstrip</p> <p>Procedures</p> <p>1. Insert the weatherstrip downward in the guide until fully seated. 2. Carefully move the regulator upward for short slow intervals, while ensuring that the window remains in the guides. 3. Inspect the door window for proper operation before installing the door trim panel.</p>