


- 4. Install the NEW front strut nut (1) and the bolt (2) from the front strut and tighten the nut to **110N·m (82lb ft)**.
- 5. Install the stabilizer shaft link in the front strut assembly. Refer to [Stabilizer Shaft Link Replacement](#) .
- 6. Remove the jack stand from the lower control arm.
- 7. Install the outer tie rod end in the steering knuckle. Refer to [Steering Linkage Outer Tie Rod Replacement](#) .
- 8. Install the speed sensor wiring harness on the front strut assembly, if needed.

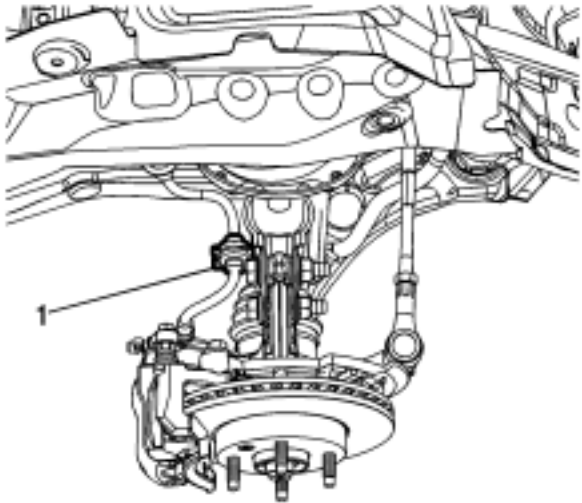

- 9. Install the front brake hose (1) on the front strut assembly.
- 10. Install the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .
- 11. Remove the support and lower the vehicle.
- 12. Install the air inlet grille panel. Refer to [Air Inlet Grille Panel Replacement](#) .