

## Heater Outlet Hose Replacement (1.6L or 1.8L)


### Special Tools

*BO-38185* Hose Clamp Pliers


For equivalent regional tools, refer to [Special Tools](#) .

### Removal Procedure

1. Drain the cooling system. Refer to [Cooling System Draining and Filling](#) .

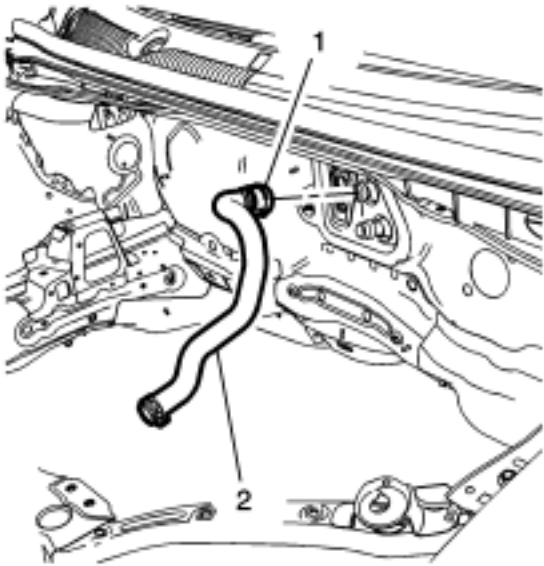

2. Disengage the heater outlet hose quick connect clip (1) at the heater core.
3. Remove the heater outlet hose (2) from the heater core.

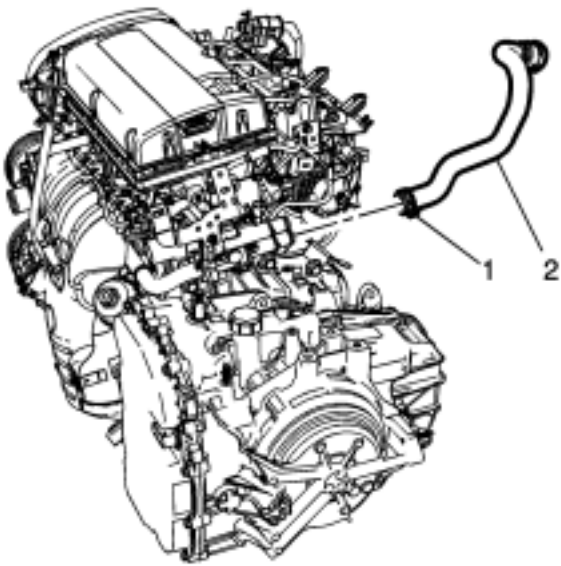

4. Remove the heater outlet hose clamp (1) at the engine using *BO-38185* Hose Clamp Pliers .
5. Remove the heater outlet hose (2) from the engine.
6. Remove the heater outlet hose from the vehicle.