


Component Locator

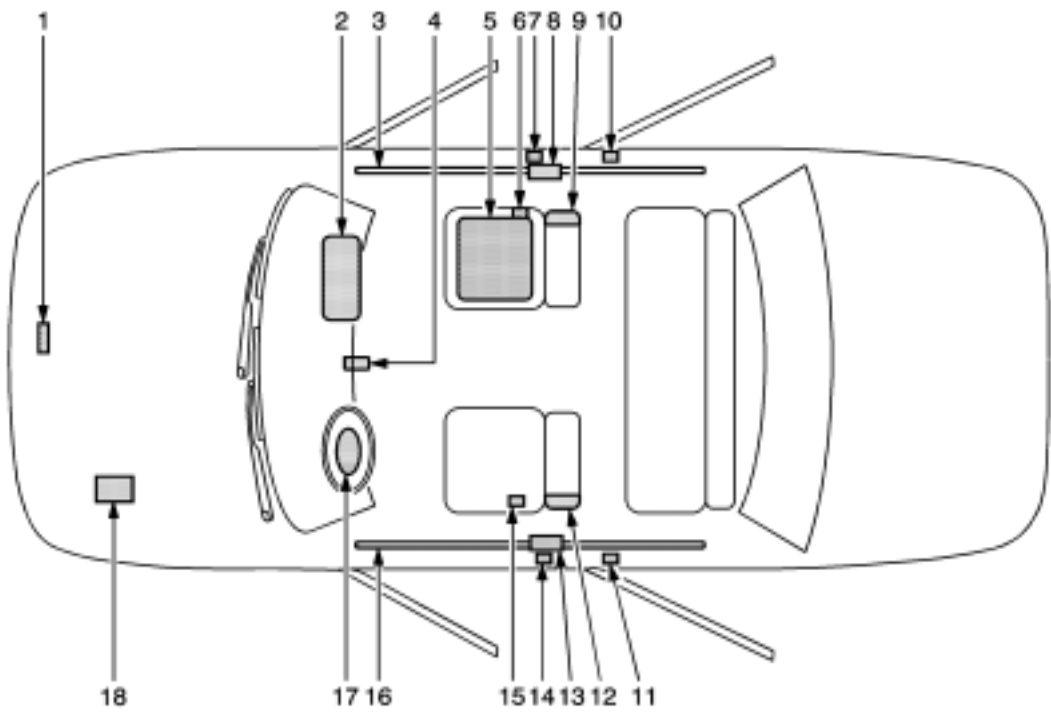

- (1) Center Front Impact Sensor—Located under the hood at the center of the vehicle
- (2) Passenger Instrument Panel Air Bag—Located at the top right under the instrument panel
- Right Roof Rail Air Bag—Located under the headliner, extending from the passenger front windshield pillar to the passenger rear windshield pillar
- (3)
- Inflatable Restraint Sensing and Diagnostic
- (4) Module (SDM)—Located underneath the center stack
- Passenger Presence System (PPS)—Located on
- (5) the passenger front seat underneath the seat bottom trim
- Passenger Seat Belt Anchor Pretensioner—
- (6) Located on the outboard side of the passengers seat
- (7) Right Front Side Impact Sensor—Located at the B-pillar underneath the door sill
- (8) Inflator Module for Right Roof Rail Air Bag— Located behind headliner at the upper B-pillar
- (9) Passenger Seat Side Air Bag—Located on the seat back of passenger seat
- Passenger Seat Belt Retractor Pretensioner—
- (10) Located under the trim near the bottom of the center pillar on the passenger side of vehicle
- Driver Seat Belt Retractor Pretensioner—
- (11) Located under the trim near the bottom of the center pillar on the driver side of vehicle
- (12) Driver Seat Side Air Bag—Located on the seat back of driver seat
- (13) Inflator Module for Left Roof Rail Air Bag— Located behind headliner at the upper B-pillar
- (14) Left Front Side Impact Sensor—Located at the B-pillar underneath the door sill
- (15) Driver Seat Belt Anchor Pretensioner—Located on the outboard side of the drivers seat
- Left Roof Rail Air Bag—Located under the headliner, extending from the driver front windshield pillar to the driver rear windshield pillar
- (16)
- (17) Driver Steering Wheel Air Bag—Located on the steering wheel
- (18) Vehicle Battery—Located under the hood on the left side