


Front Side Door Lock Cylinder Replacement

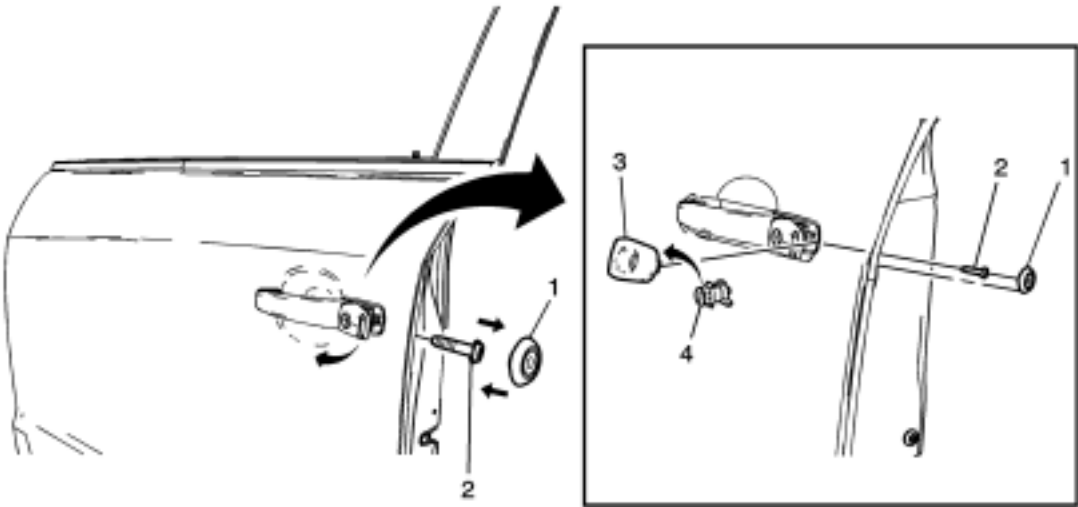

Callout	Component Name
1	<div>Front Side Door Lock Cylinder Screw Access Plug</div> <div>Tip Use the appropriate tool, remove the plug.</div>
2	<div>Front Side Door Lock Cylinder Clamp Screw</div> <div>Caution: Refer to Fastener Caution .</div> <div>Procedure</div> <div>Do Not remove the cylinder clamp screw completely from the housing, unscrew the screw to a hard stop, releasing the cylinder from the housing.</div> <div>Tip It is not necessary to remove the outside door handle or housing to replace the lock cylinder.</div> <div>Tighten 5 N·m (44 lbin)</div>
3	<div>Front Side Door Lock Cylinder Cover</div> <div>Procedure</div> <div>Remove the lock cylinder cover. Refer to Front Side Door Lock Cylinder Opening Cover Replacement .</div>
4	<div>Front Side Door Lock Cylinder</div> <div>Procedure</div> <div><div>1. Ensure that the lock cylinder gasket is in place when installing the lock cylinder to the handle.</div><div>2. Inspect the lock cylinder for proper operation.</div></div>