


- 3. Position the front compartment side rail on the vehicle (1).
- 4. Verify the fit of the front compartment side rail.
- 5. Clamp the front compartment side rail into position.

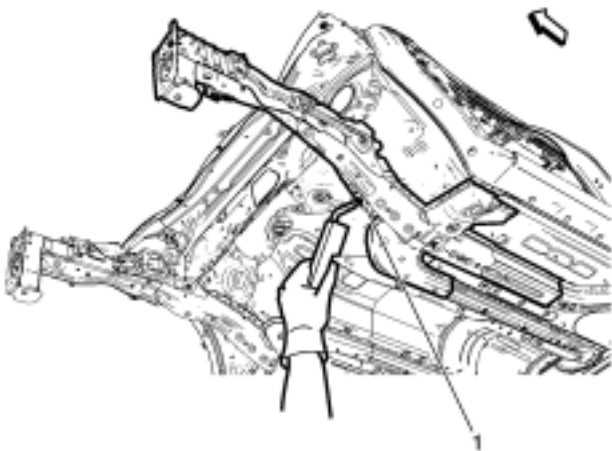

- 6. Plug weld accordingly (1).
- 7. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to [Anti-Corrosion Treatment and Repair](#) .
- 8. Paint the repaired area. Refer to [Basecoat/Clearcoat Paint Systems](#) .
- 9. Install all related panels and components.
- 10. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
- 11. Enable the SIR system. Refer to [SIR Disabling and Enabling](#) .