


SONIC

Radiator Replacement (Gasoline)

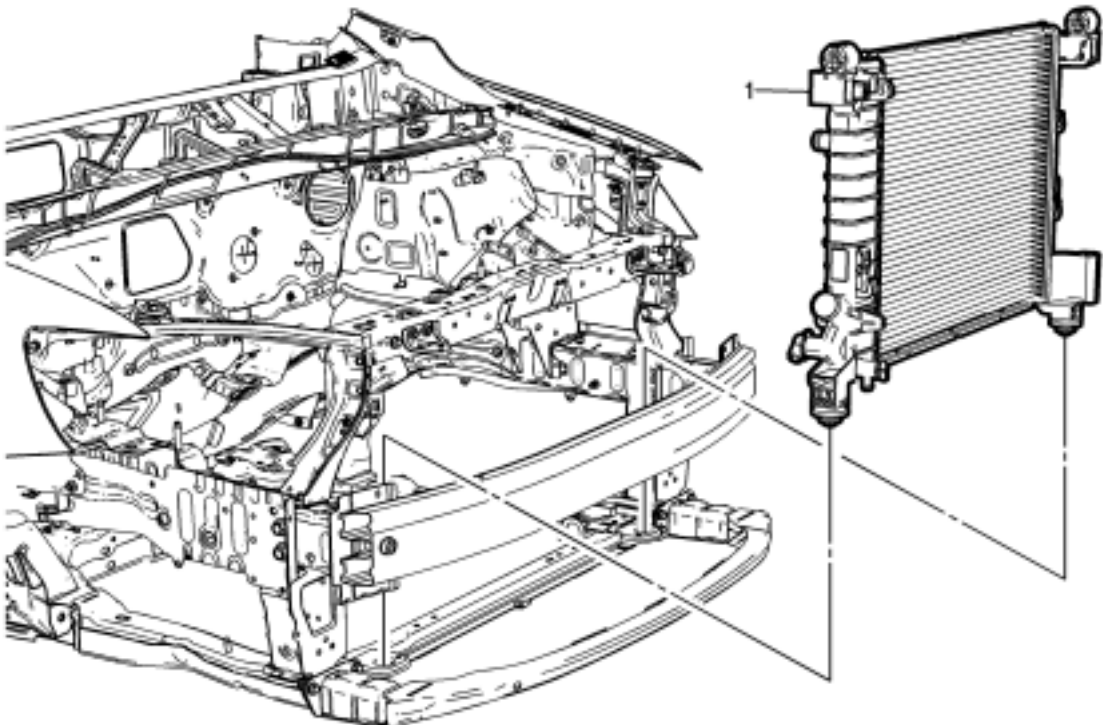

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Drain the coolant. Refer to <a href="#">Cooling System Draining and Filling</a> .</p> <p>2. Remove the engine coolant temperature sensor.</p> <p>3. Remove the air conditioning condenser. Refer to <a href="#">Air Conditioning Condenser Replacement</a> .</p> <p>4. Remove the engine coolant fan shroud. Refer to <a href="#">Engine Coolant Fan Shroud Replacement</a> .</p> <p>5. Remove the radiator hoses. Refer to <a href="#">Radiator Inlet Hose Replacement</a> and <a href="#">Radiator Outlet Hose Replacement</a> .</p> <p>6. Remove the radiator upper bracket. Refer to <a href="#">Radiator Upper Bracket Replacement</a> .</p>	
1	<p>Radiator</p> <p><b>Tip</b> Tilt radiator forward to remove.</p>