


Intermediate Steering Shaft Replacement (NJ1)

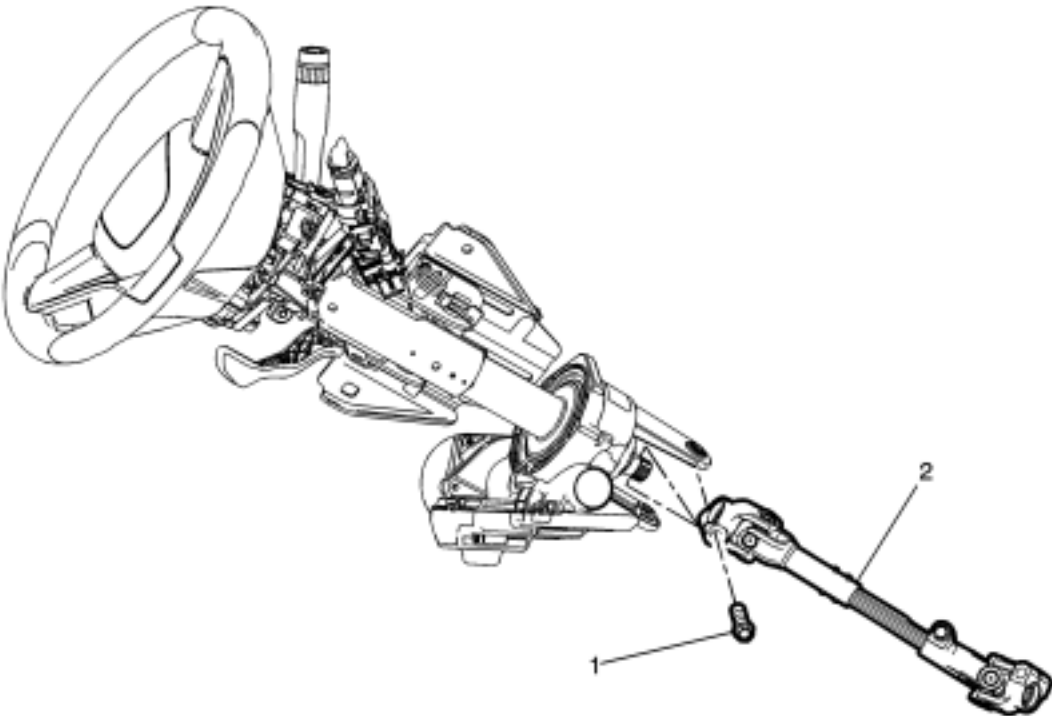

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the steering column and the intermediate steering shaft as an assembly. Refer to Steering Column Replacement .</p>	
1	<p>Intermediate Steering Shaft Upper Bolt</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 49N·m (36lbft)</p>
2	<p>Intermediate Steering Shaft</p> <p>Procedure</p> <p>1. Use paint in order to place match marks on the intermediate steering shaft and on the steering column shaft.</p> <p>2. If you are replacing the intermediate steering shaft or the steering column, copy the match marks from the old parts to the new parts.</p> <p>3. Align the match marks as you install the intermediate steering shaft to the steering column shaft.</p> <p>4. After the installation is complete, perform the following tasks:</p> <p>Setup the power steering control module. Refer to . Center the steering angle sensor. Refer to .</p> <p>2.1. Setup the power steering control module. Refer to Power Steering Control Module Programming and Setup .</p> <p>2.2. Center the steering angle sensor. Refer to Steering Angle Sensor Centering .</p>