


Instrument Panel Inflatable Restraint Module Replacement

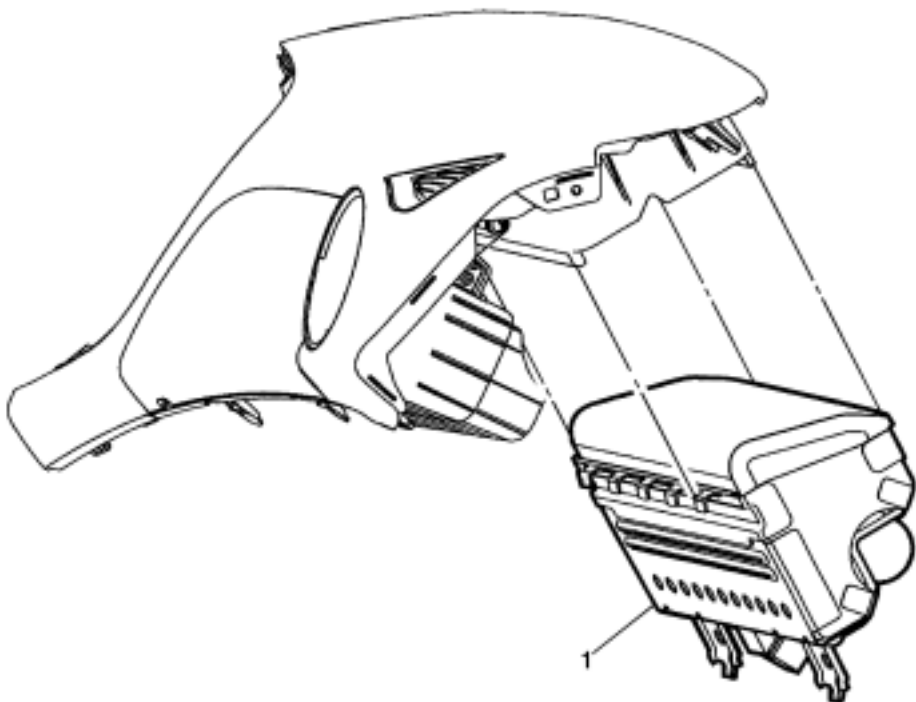

Callout	Component Name
<p>Warning: Refer to SIR Inflator Module Handling and Storage Warning .</p> <p>Warning: Refer to SIR Warning .</p> <p>Preliminary Procedure</p> <p>1. Disable the SIR system. Refer to SIR Disabling and Enabling .</p> <p>2. Remove the instrument panel upper trim panel assembly – right side. Refer to Instrument Panel Upper Trim Panel Replacement - Right Side .</p>	
1	<p>Instrument Panel Inflatable Restraint Module Assembly</p> <p>Procedure</p> <p>1. Ensure that the instrument panel inflatable restraint module is fully deployed before disposal. If the module was replaced under warranty, fully deploy and dispose of the module after the required retention period. Refer to Inflatable Restraint Module Handling and Scrapping .</p> <p>2. Enable the SIR system. Refer to SIR Disabling and Enabling .</p>