


Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)

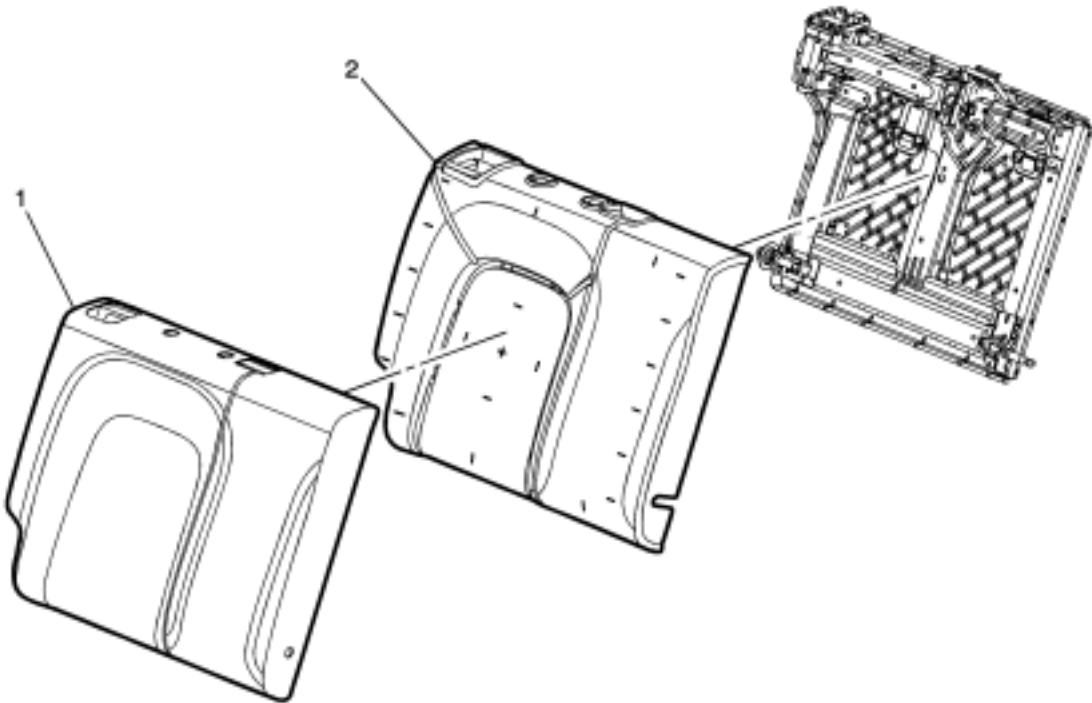

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement</p> <p>2. Remove the rear seat head restraint guide. Refer to Rear Seat Head Restraint Guide Replacement</p> <p>3. Remove the rear seat back cushion latch release knob bezel. Refer to Rear Seat Back Cushion Latch Release Knob Bezel Replacement</p> <p>4. Remove the child seat back cushion cover. Refer to Child Seat Back Cushion Cover Replacement</p> <p>5. Remove the rear seat back cushion pivot support. Refer to Rear Seat Back Cushion Pivot Support Replacement</p> <p>6. Remove the rear seat shoulder belt guide opening bezel, if equipped. Refer to Rear Seat Shoulder Belt Guide Opening Bezel Replacement</p>	
1	<p>Rear Seat Back Cushion Cover</p> <p>Procedure</p> <p>1. Remove the seat back carpet.</p> <p>2. Remove the rear seat center head restraint, if equipped.</p> <p>3. Disengage the J-channel retainers from the seat back cushion frame.</p> <p>4. Remove the hog rings from the under side of the rear seat back cushion cover.</p> <p>5. Pull the cover away from the pad to disengage the hook and loop retainers.</p> <p>6. If replacing the seat back panel, transfer components as necessary.</p> <p>Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.</p>
2	<p>Rear Seat Back Cushion Pad</p>