


Note: When the seat belt pretensioner deploys, the deployment fixture may jump about 30cm (1 ft) vertically. This is a normal reaction of the seat belt pretensioner due to the force of the rapid expansion of gas inside the pretensioner.

- 18. Place a 12V minimum/2A minimum power source (i.e., vehicle battery) near the shorted end of the harness.
- 19. Connect the SIR deployment harness wires to the power source. Pretensioner deployment will occur when contact is made.
- 20. Disconnect the SIR deployment harness from the power source after the pretensioner deploys.

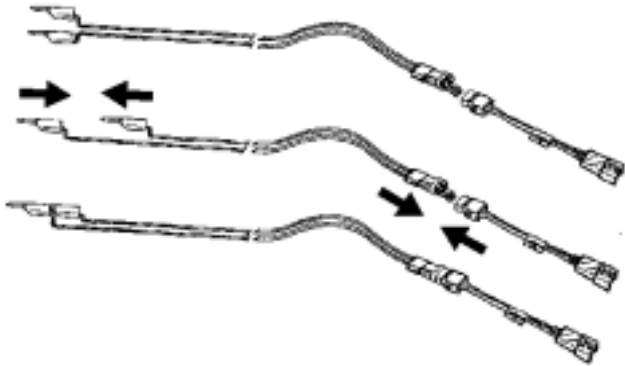

- 21. Seat one banana plug into the other in order to short the deployment harness leads.
- 22. If the pretensioner did not deploy, disconnect the adapter and discontinue the procedure. Contact the Technical Assistance Group. Otherwise, proceed to the following steps.
- 23. Put on a pair of shop gloves.
- 24. Disconnect the pigtail adapter from the pretensioner as soon as possible.
- 25. Inspect the pigtail adapter and the SIR deployment harness. Replace as needed.
- 26. Dispose of the deployed pretensioner through normal refuse channels.
- 27. Wash hands with a mild soap.