


Rear Side Door Replacement

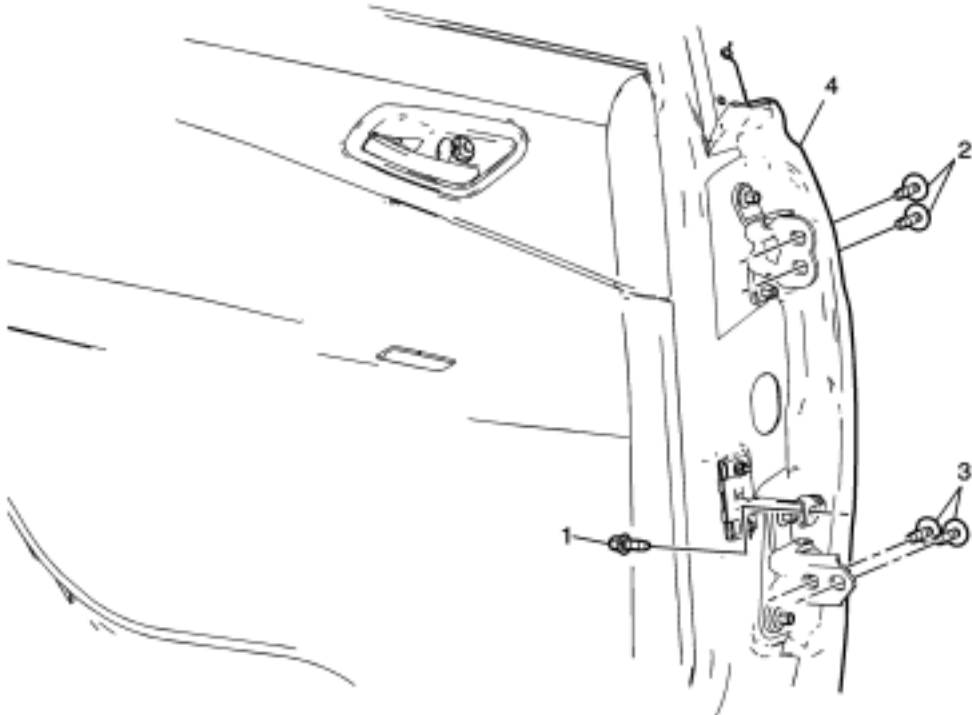

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> .</p> <p><b>Preliminary Procedures</b></p> <p>1. Mark the location of the hinge before removing the bolts with a grease pencil. 2. Remove the rear door trim panel. Refer to <a href="#">Rear Side Door Trim Replacement</a> .</p>	
1	<p>Rear Side Door Check Link Bolt to Body</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <p>1. Remove the water deflector. 2. Disconnect the door electrical connector. 3. Support the door before removing the hinge bolts. 4. With an assistant, remove the door. 5. After the door has been removed, ensure that the dome lamp is off. If the dome lamp is on remove the fuse.</p> <p><b>Tighten</b> 22 N·m (16 lbft)</p>
2	<p>Rear Side Door Hinge Bolt to Door (Qty: 2)</p> <p><b>Tighten</b> 32 N·m (24 lbft)</p>
3	<p>Rear Side Door Hinge Bolt to Door (Qty: 2)</p> <p><b>Tighten</b> 32 N·m (24 lbft)</p>
4	<p>Rear Side Door Assembly</p> <p><b>Procedure</b></p> <p>1. When replacing the door it is necessary to transfer all of the internal components. 2. If the door striker needs adjust. Refer to <a href="#">Rear Side Door Lock Striker Adjustment</a> . 3. Rear door adjustment. Refer to <a href="#">Rear Side Door Adjustment</a> .</p>