


Front Seat Belt Buckle Replacement

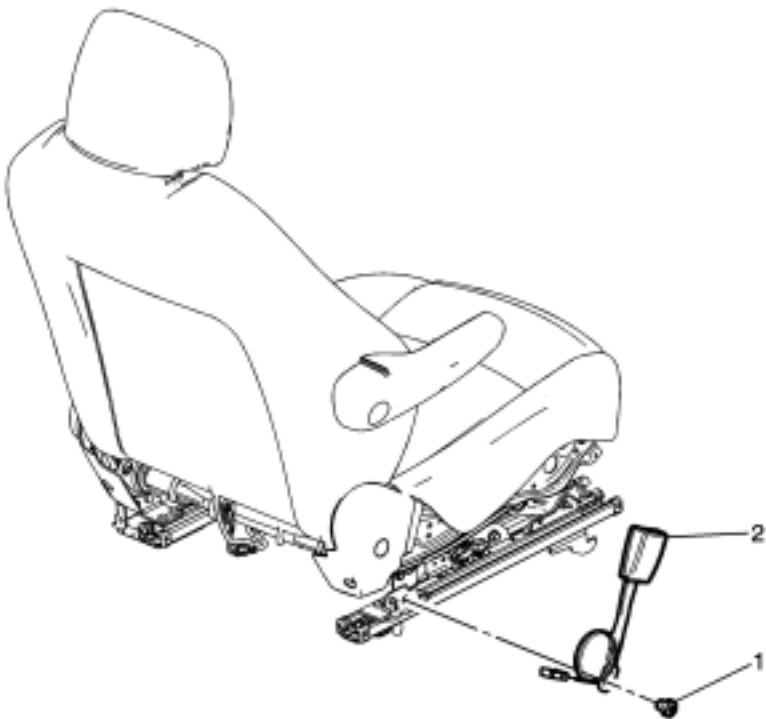

Callout	Component Name
<p>Preliminary Procedures</p> <p>Remove the front seat. Refer to Driver or Passenger Seat Replacement .</p>	
1	<p>Driver or Passenger Seat Belt Buckle Fastener</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 45 N·m (33 lbft)</p>
2	<p>Driver or Passenger Seat Belt Buckle Assembly</p> <p>Procedure</p> <p>Disconnect the electrical connector, if equipped.</p>