


Headlamp Housing Bracket Replacement

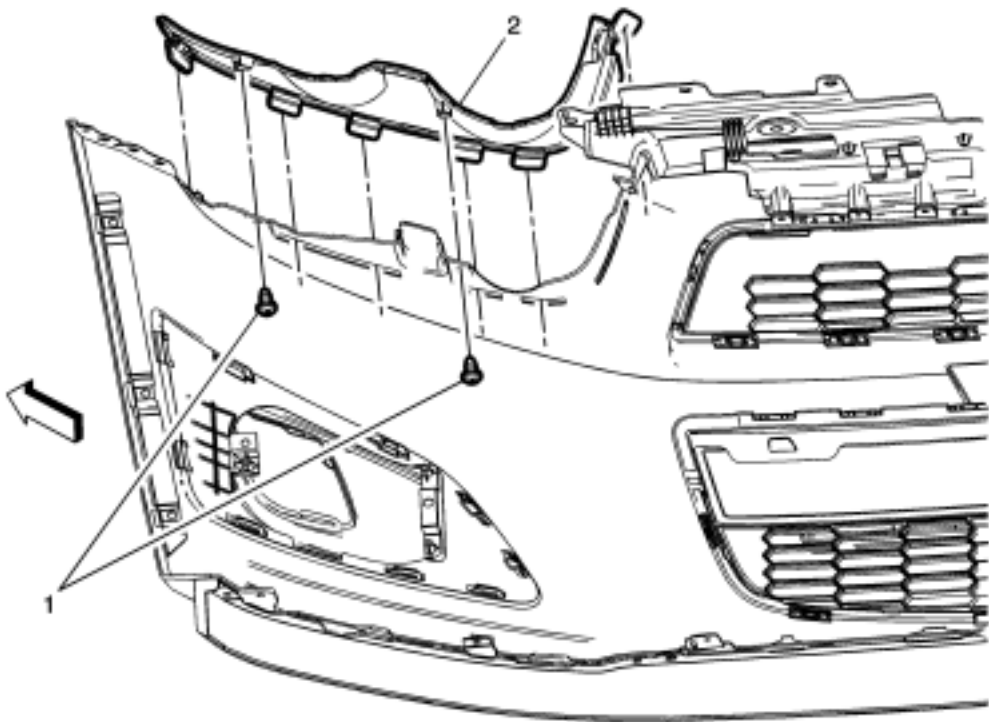

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .</p>	
1	<p>Headlamp Housing Bracket Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 2.5 N·m (22 lbin)</p>
2	<p>Headlamp Housing Bracket</p> <p>Procedure</p> <p>Release the tabs on the housing bracket from the front bumper fascia and remove.</p>