


Stop and Turn Signal Lamp Bulb Replacement (Hatchback)

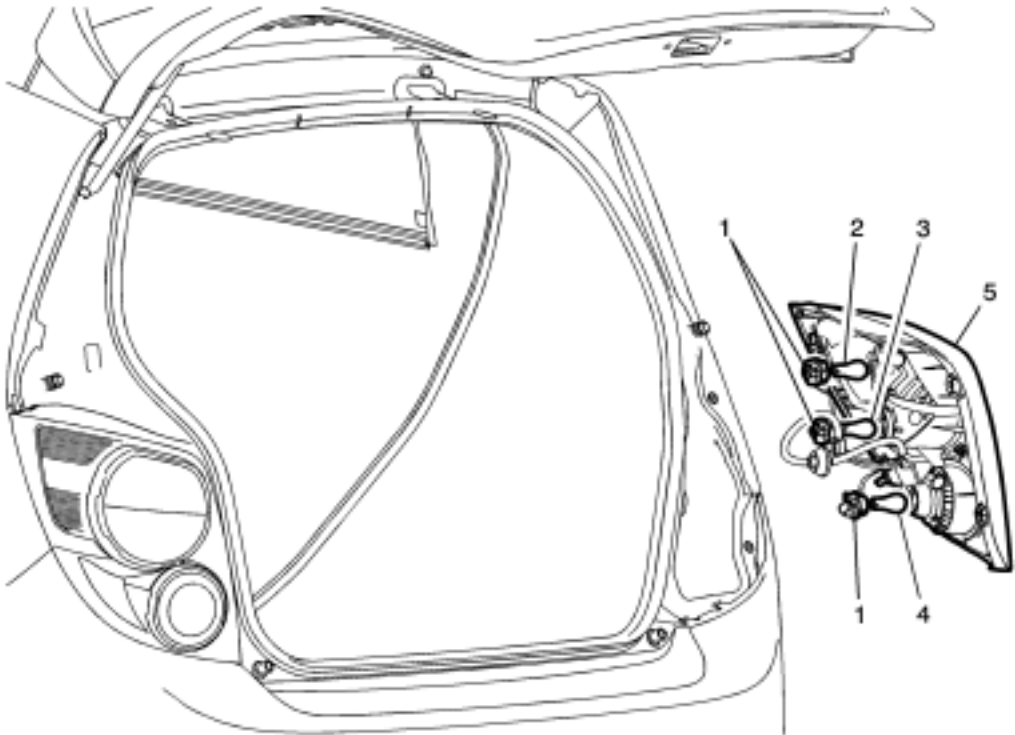

Callout	Component Name
<b>Preliminary Procedure</b> Remove the tail lamp assembly. Refer to <a href="#">Tail Lamp Replacement</a> .	
1	Tail Lamp Socket (Qty: 3)  <b>Procedure</b> Rotate the lamp socket counter-clockwise and remove the socket from the lamp housing.
2	Park and Stop Lamp Bulb  <b>Procedure</b> Pull the bulb straight from the lamp harness socket.
3	Turn Signal Bulb
4	Back Up Bulb
5	Tail Lamp Housing Assembly