


Liftgate Latch Replacement

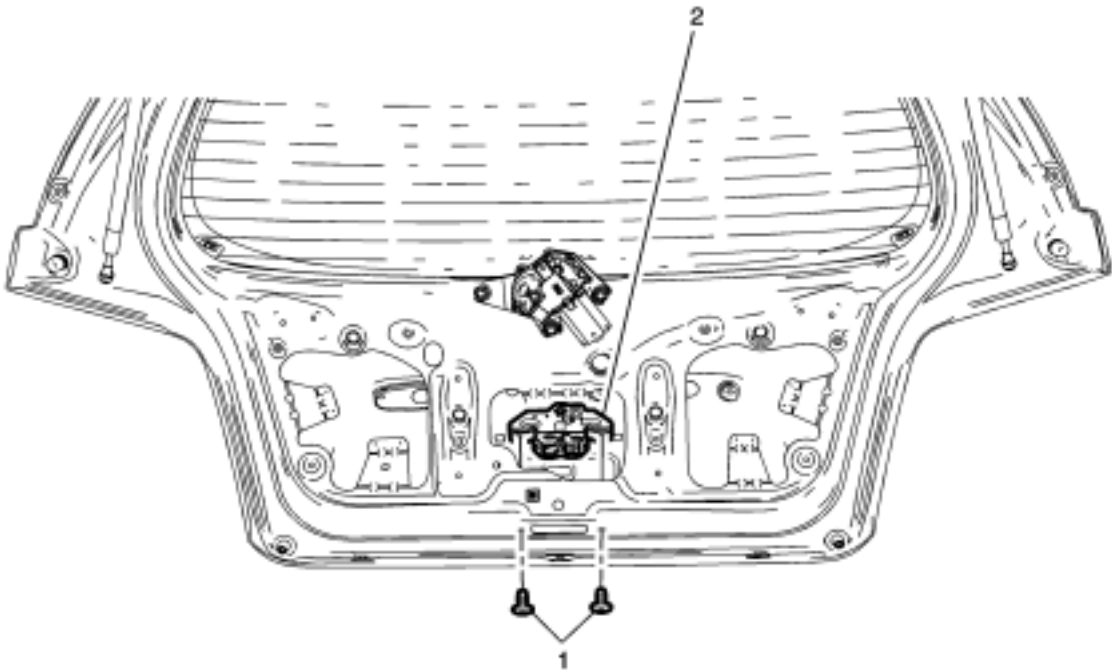

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the liftgate trim finish panel. Refer to Liftgate Trim Finish Panel Replacement .</p> <p>2. Remove the liftgate latch cover.</p>	
1	<p>Liftgate Latch Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 9 N·m (80 lbin)</p>
2	<p>Liftgate Latch Assembly</p> <p>Procedure</p> <p>1. Disconnect the electrical connector.</p> <p>2. Adjust the liftgate if needed.</p>