


Rear Seat Belt Buckle Replacement

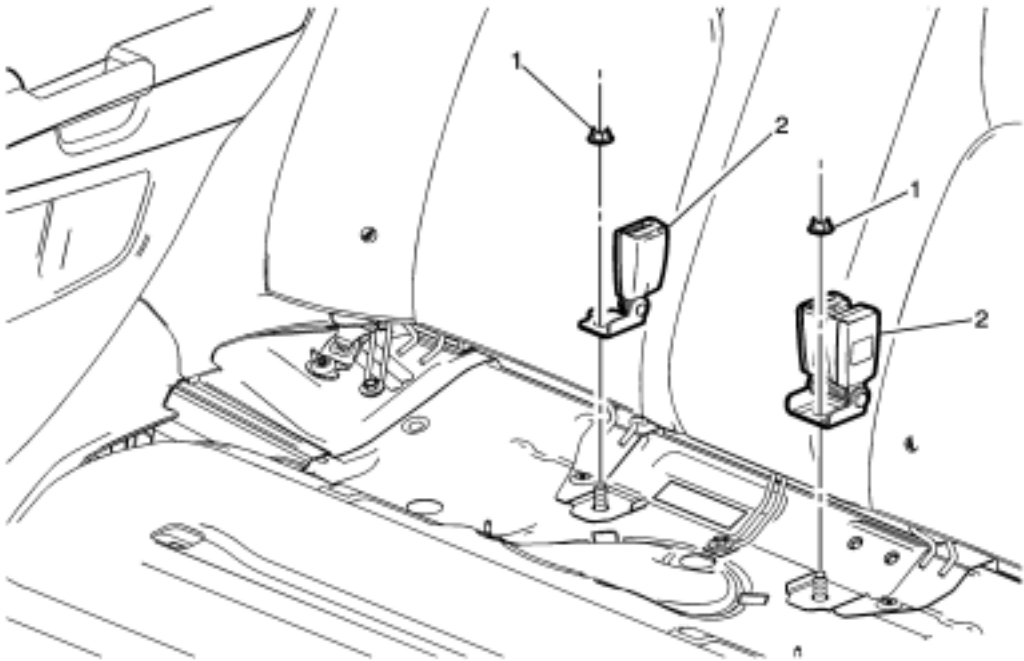

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement .</p>	
1	<p>Rear Seat Belt Buckle Fastener (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 45 N·m (33 lbft)</p>
2	<p>Rear Seat Belt Buckle Assembly (Qty: 2)</p>