


Heater and Air Conditioning Control Replacement

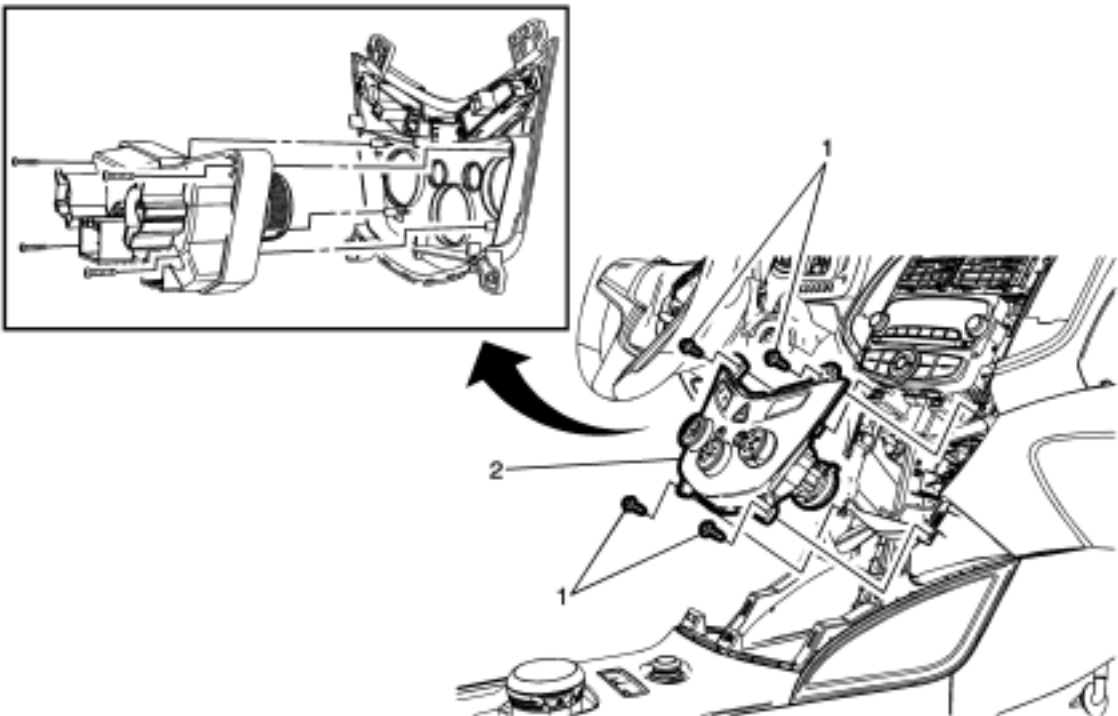

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove I/P center bezel. Refer to Instrument Panel Center Molding Replacement .</p> <p>2. Remove front floor shifter bezel. Refer to Front Floor Console Cover Replacement .</p>	
1	<p>Heater and Air Conditioning Control Retainer (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 2.5 N·m (22 lbin)</p>
2	<p>Heater and Air Conditioning Control</p> <p>Procedure</p> <p>1. Disconnect the electrical connectors</p> <p>2. Disconnect the heater and air conditioning temperature control cable. Refer to Temperature Control Cable Replacement .</p> <p>3. Disconnect the mode control cable. Refer to Mode Control Cable Replacement .</p>