


Driver or Passenger Seat Shoulder Belt Replacement (with A69)

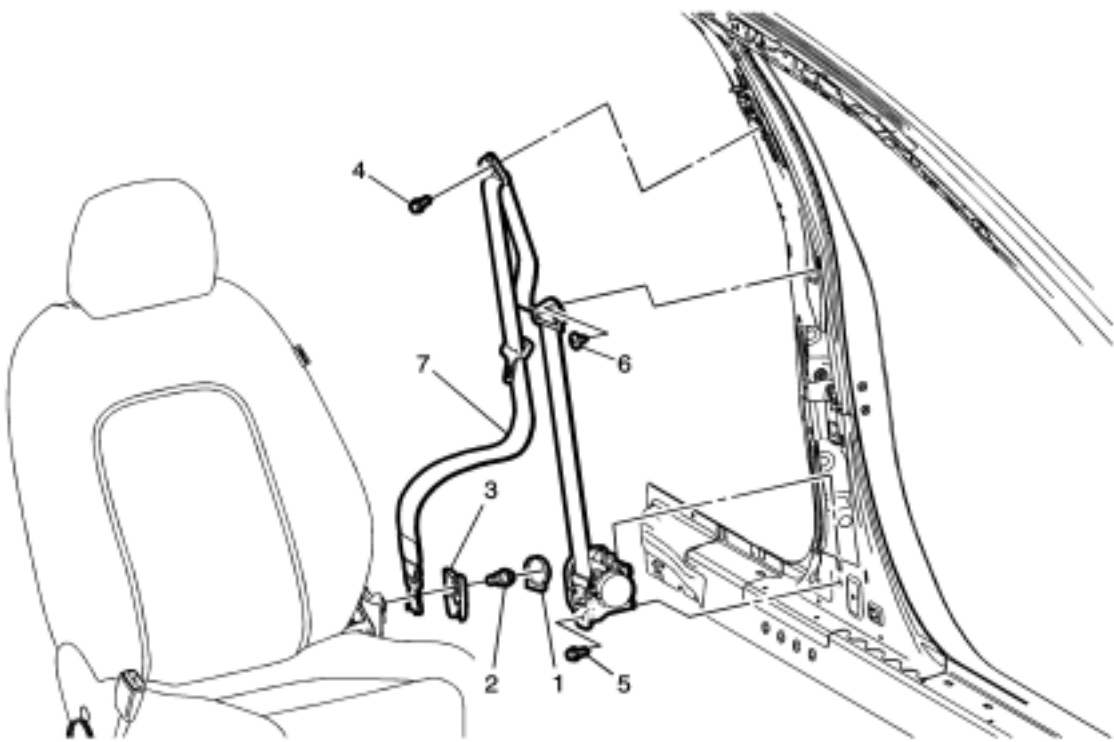

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> .</p> <p><b>Warning:</b> Refer to <a href="#">SIR Inflator Module Handling and Storage Warning</a> .</p> <p><b>Warning:</b> Refer to <a href="#">SIR Seatbelt Pretensioner Handling Warning</a> .</p> <p><b>Warning:</b> In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods may be a violation of federal, state, or local laws.</p> <p><b>Preliminary Procedures</b></p> <p>1. Move the front seat to a full forward and full up position.</p> <p>2. Disable the SIR. Refer to <a href="#">SIR Disabling and Enabling</a> .</p> <p>3. Remove the center pillar upper trim panel. Refer to <a href="#">Center Pillar Upper Trim Panel Replacement</a> .</p>	
1	Driver or Passenger Seat Belt Tensioner Cover
2	Driver or Passenger Seat Belt Tensioner Cover Fastener  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .  <b>Tighten</b> 7.5 N·m (66 lbin)
3	Driver or Passenger Seat Belt Tensioner Cover
4	Driver or Passenger Seat Shoulder Belt Fastener  <b>Tighten</b> 45 N·m (33 lbft)