


Front Seat Cushion Outer Trim Panel Replacement (2 Way Uplevel)

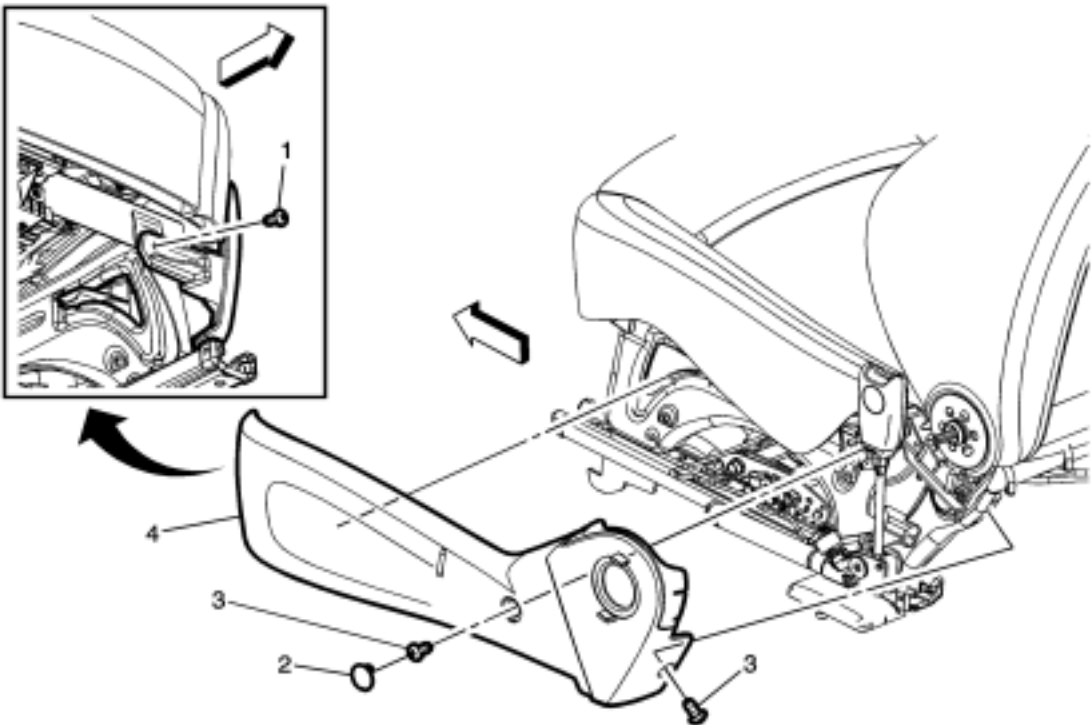

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the driver or passenger seat. Refer to Driver or Passenger Seat Replacement</p> <p>2. Remove the front seat outer recliner upper finish cover. Refer to Front Seat Outer Recliner Upper Finish Cover Replacement</p> <p>3. Remove the driver or passenger seat recliner handle. Refer to Driver or Passenger Seat Recliner Handle Replacement</p> <p>4. Remove the front seat adjuster handle. Refer to Driver or Passenger Seat Adjuster Handle Replacement</p>	
1	<p>Front Seat Cushion Outer Trim Panel Front Fastener</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 8N·m (71lbin)</p>
2	<p>Front Seat Cushion Outer Trim Panel Cap</p>
3	<p>Front Seat Cushion Outer Trim Panel Fasteners (Qty: 2)</p> <p>Tighten 8N·m (71lbin)</p>
4	<p>Front Seat Cushion Outer Trim Panel</p> <p>Procedure</p> <p>1. Make sure the seat is in the full up position.</p> <p>2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame.</p> <p>3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward.</p> <p>4. If replacing the cover, transfer components as necessary.</p>