


Outside Rearview Mirror Housing Replacement

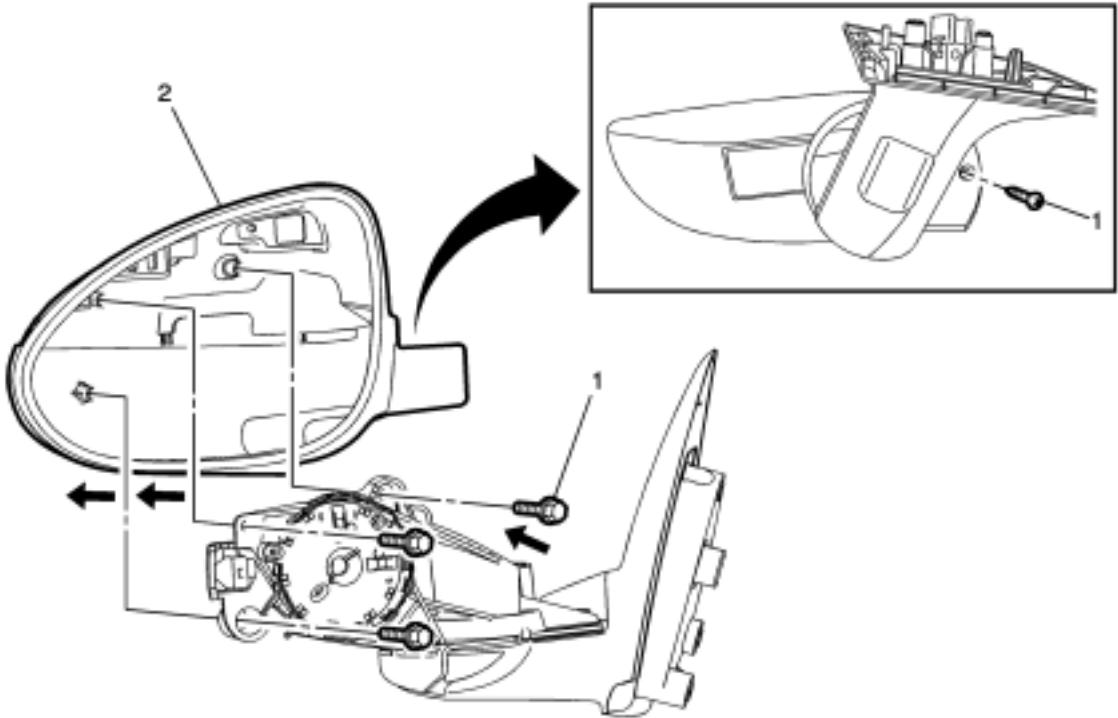

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the outside rearview housing cover. Refer to Outside Rearview Mirror Housing Rear Cover Replacement .</p> <p>2. Remove the outside rearview mirror motor. Refer to Outside Rearview Mirror Motor Replacement .</p>	
1	<p>Outside Rearview Mirror Housing Fastener (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 5 N·m (44 lbin)</p>
2	<p>Outside Rearview Mirror Housing</p> <p>Procedure</p> <p>Inspect the outside mirror for proper operation before installing the door trim panel.</p>