


Air Inlet Grille Panel Replacement

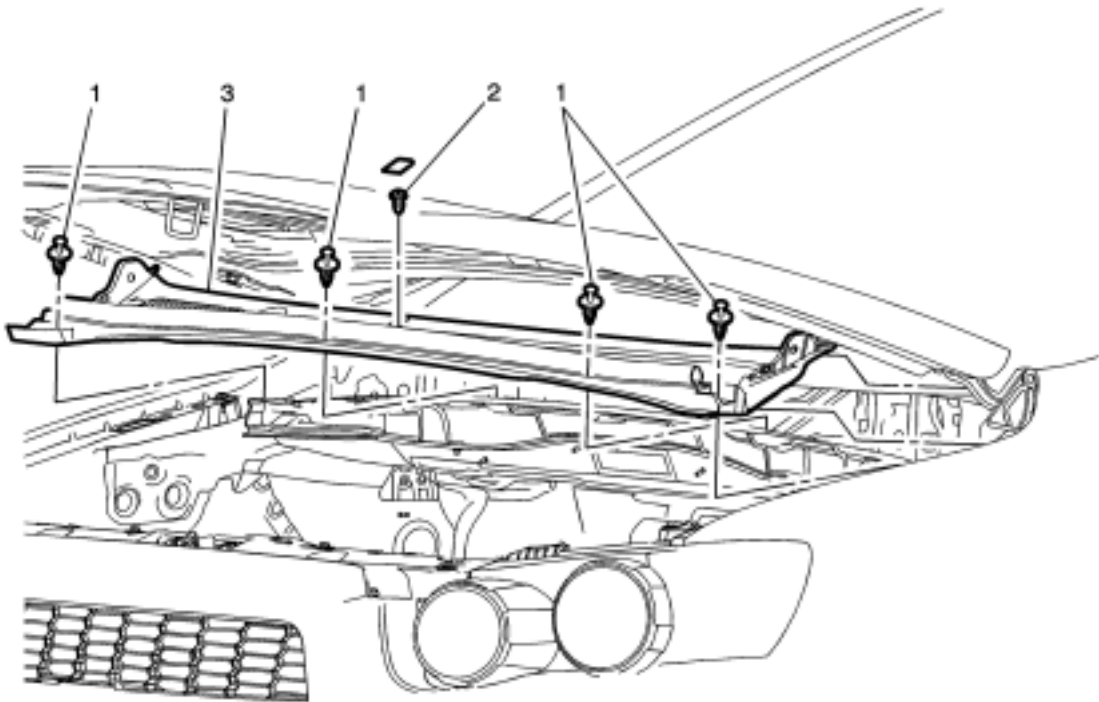

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Remove both wiper arm assemblies. Refer to <a href="#">Windshield Wiper Arm Replacement</a> .</p> <p>2. Remove both outer hood rear seals. Refer to <a href="#">Hood Rear Seal Replacement</a> .</p>	
1	<p>Air Inlet Grille Panel Retainer (Qty: 4)</p> <p><b>Procedure</b></p> <p>Release and remove the retainers from the air inlet grille panel.</p>
2	<p>Air Inlet Panel Screw</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <p>1. Remove the screw cover from the air inlet grille panel.</p> <p>2. Remove the air inlet grille panel screw. <b>Tighten</b> 2.5 N·m (22 lbin)</p>
3	<p>Air Inlet Grille Panel</p> <p><b>Procedure</b></p> <p>1. Lift the front edge of the grille panel off the front edge of the dash upper extension panel opening cover.</p> <p>2. Slide the grille panel forward from both hood hinges.</p> <p>3. Remove the grille panel from the vehicle.</p> <p>4. Remove the hood rear weather-strip. Refer to <a href="#">Hood Rear Weatherstrip Replacement</a> .</p>