



**Note:** DO NOT reuse the rear lower control arm nut. The nut is NOT reusable.

- 5. Remove the front lower control arm rear nut (1) and bolt (2).

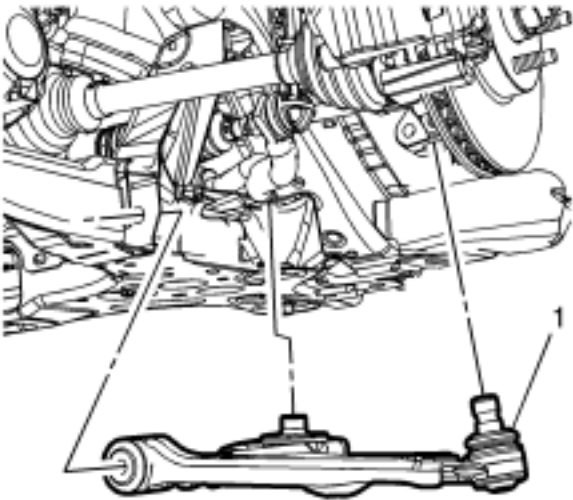

- 6. Remove the front lower control arm (1).

Installation Procedure

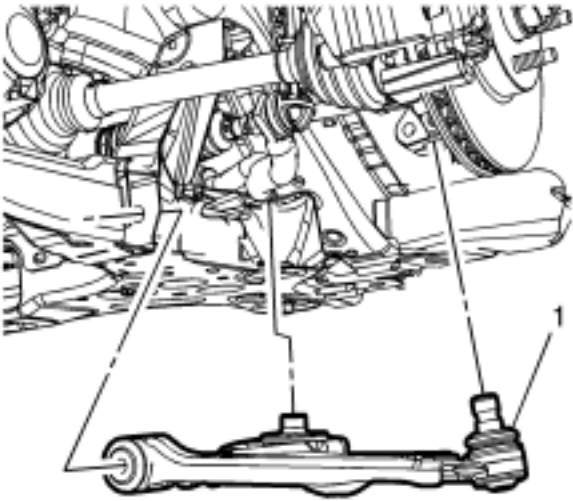

- 1. Position the lower control arm (1) in the vehicle.