


Driver or Passenger Seat Shoulder Belt Replacement (without A69)

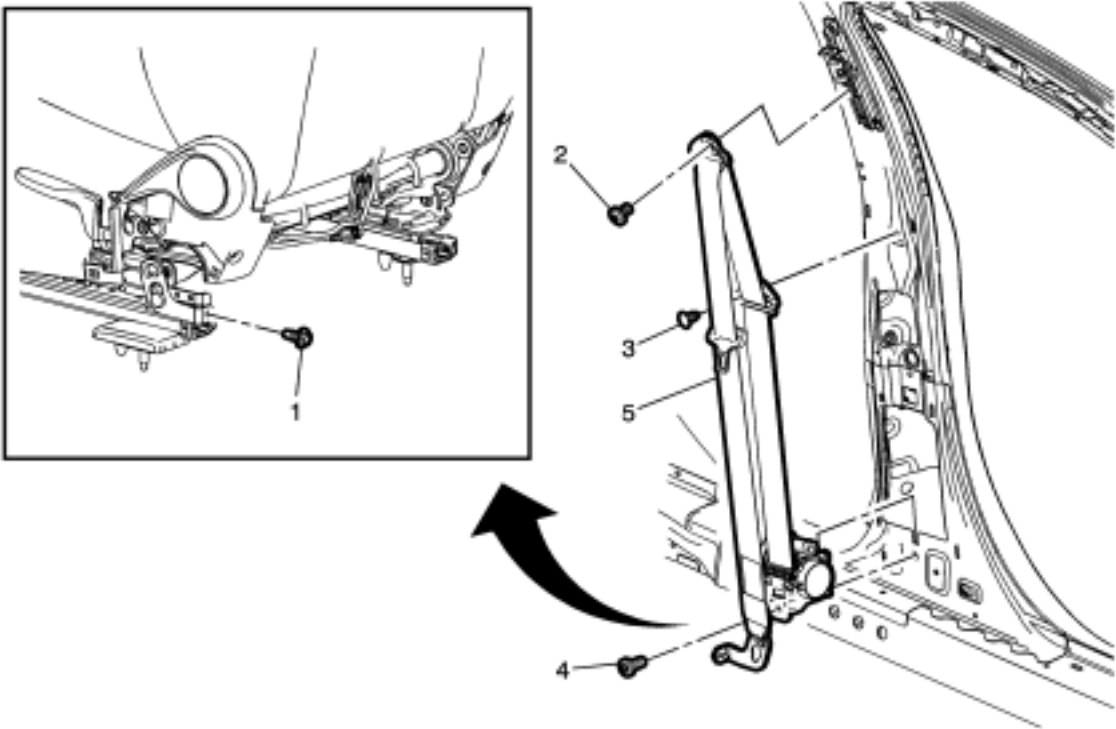

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> .</p> <p><b>Warning:</b> Refer to <a href="#">SIR Seatbelt Pretensioner Handling Warning</a> .</p> <p><b>Warning:</b> In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods may be a violation of federal, state, or local laws.</p> <p><b>Preliminary Procedures</b></p> <p>1. Remove the center pillar upper trim panel. Refer to <a href="#">Center Pillar Upper Trim Panel Replacement</a> .</p> <p>2. Remove the front seat lower finish cover. Refer to <a href="#">Front Seat Belt Anchor Plate Tensioner Cover Replacement</a> .</p>	
1	Front Seat Belt Anchor Plate Fastener  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .  <b>Tighten</b> 8 N·m (70 lbin)
2	Front Seat Belt Retractor D Ring Fastener  <b>Tighten</b> 45 N·m (33 lbft)
3	Front Seat Shoulder Belt Guide Retainer
4	Front Seat Shoulder Belt Retractor Fastener  <b>Tighten</b> 45 N·m (33 lbft)
5	Front Seat Shoulder Belt Assembly