


Note: Install the front lower control arm rear bolt and nut hand tight to hold the lower control arm in place while tightening the front lower control arm bolt.

2. Install the NEW front lower control arm front bolt (1) and tighten to.
- First Pass: **115 N·m (85 lb ft)**
 - Final Pass: **plus an additional 65 degrees**

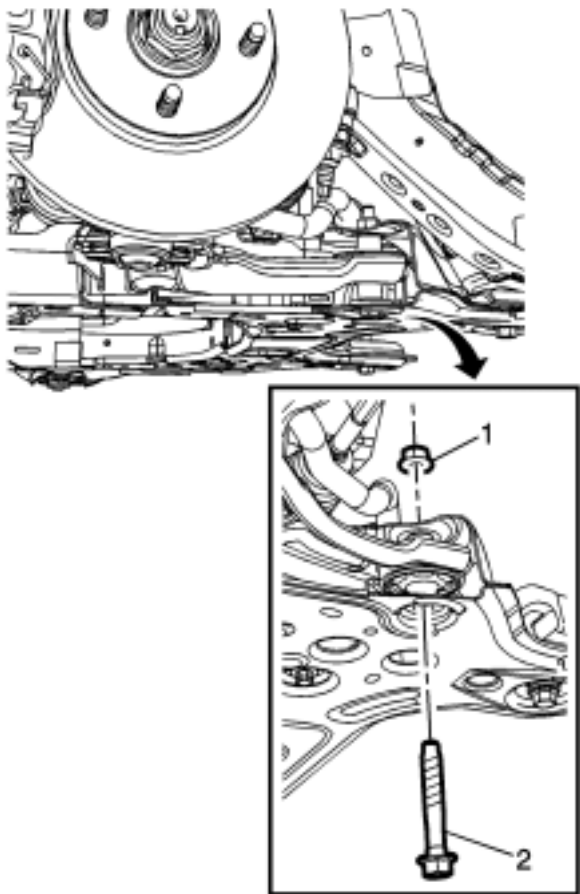

3. Tighten the NEW front lower control arm rear nut (1) to:
- First Pass: **160 N·m (118 lb ft)**
 - Final Pass: **plus an additional 35 degrees**