


Stop and Turn Signal Lamp Bulb Replacement (Sedan)

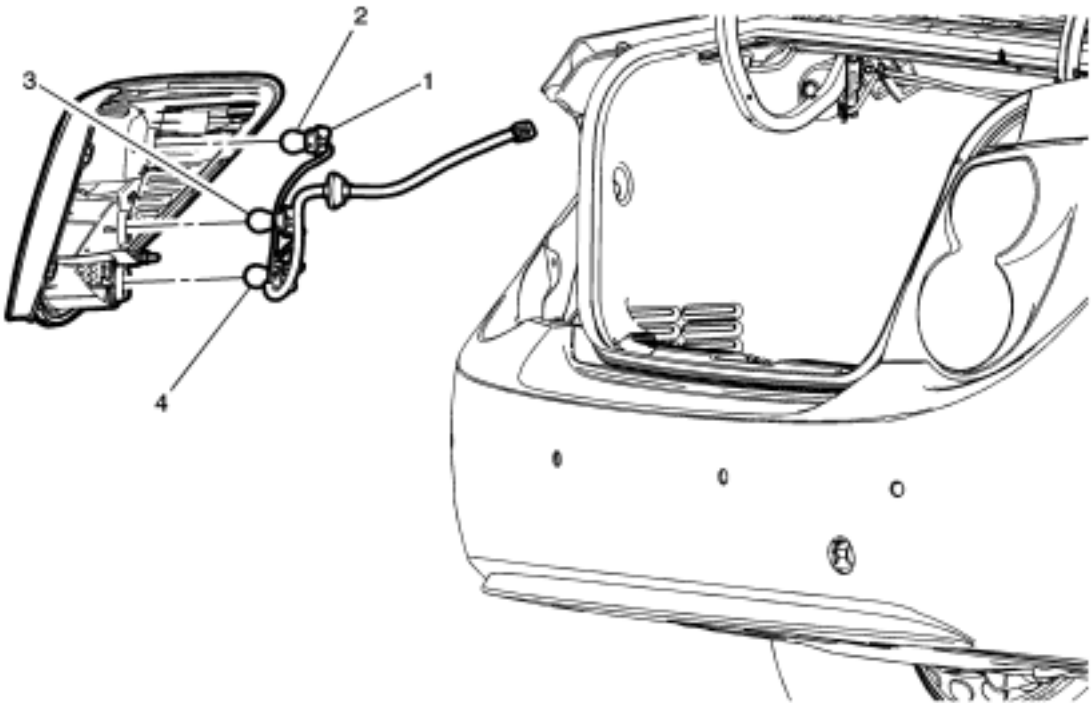

Callout	Component Name
<b>Preliminary Procedure</b> Remove the tail lamp assembly. Refer to <a href="#">Tail Lamp Replacement</a> .	
1	<div>Tail Lamp Socket</div> <div><b>Procedure</b> Rotate the lamp socket counter-clockwise and remove the socket from the lamp housing.</div>
2	<div>Park and Stop Lamp Bulb</div> <div><b>Procedure</b> Push the bulb inward while rotating counter-clockwise to remove.</div>
3	Turn Signal Bulb
4	Back Up Bulb