


Outside Rearview Mirror Glass Replacement

Removal Procedure


Warning: Approved safety glasses and gloves should be worn when performing this procedure to reduce the chance of personal injury.

1. Place masking tape over the mirror glass.

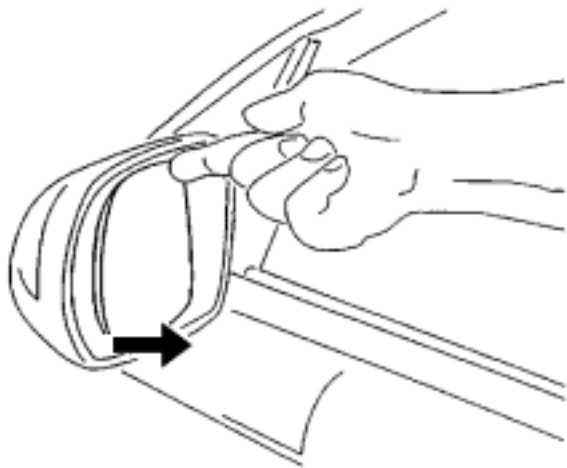

2. Carefully push the outside rearview mirror glass upward and into the right corner of the mirror housing, allowing access to the bottom edge.
3. Grasp the bottom edge of the mirror glass firmly, lift it up and pull rearward until the mirror glass releases the motor ring.

Installation Procedure

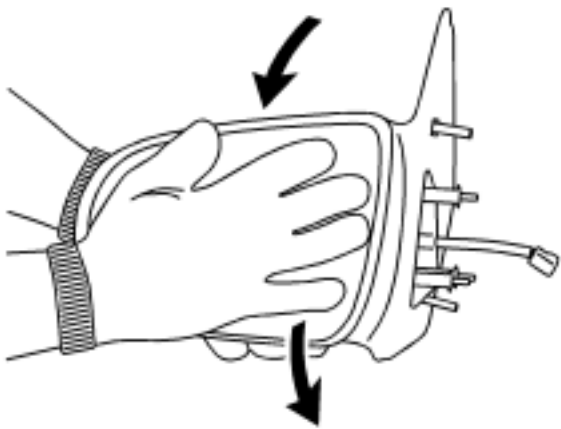

1. Place the mirror glass on the lower motor ring retainers.
2. Place one hand on the back of the mirror housing, using the flat palm of the other hand press inward locking the mirror glass to the motor ring.
3. Remove the masking tape from the mirror glass.
4. Inspect the outside mirror for proper operation before installing the door trim panel.