


5. Install the stabilizer shaft link to the stabilizer shaft. Refer to [Stabilizer Shaft Link Replacement](#) .

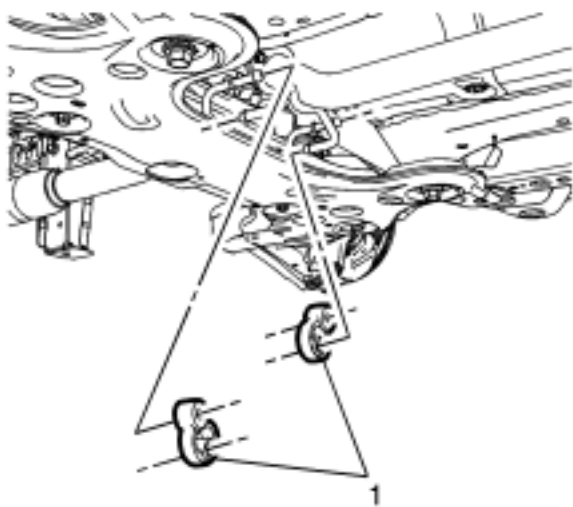

6. Install the exhaust pipe insulators (1).
7. Install the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .
8. Remove the support and lower the vehicle.